OWNER'S MANUAL with Assembly Instructions



8'x12.5' Storage Building



Lifetime 8' x 12.5' Outdoor Shed **MODEL #6402**

REGISTER YOUR LIFETIME PRODUCT TODAY!

There are benefits to registering your Lifetime product. With our new online product registration form, it's fast and easy! Register with us at www.lifetime.com and enjoy these great benefits:

- Receive exclusive money-saving offers from BuyLifetime.com, our online store, as well as NEW product notifications and special closeout promotions!
- In the unlikely event of a product recall or safety modification, we will notify you immediately and directly.
- Registering your product guarantees you immediate warranty service. If you do not register your product, your warranty rights will not be diminished. But you will need to provide a sales receipt to verify your product purchase date before warranty service will be provided.

Lifetime's Promise to You:

Maintaining your privacy is our long-standing policy at Lifetime. And you can rest assured that Lifetime will not sell or provide your personal data to other third parties, or allow them to use your personal data for their own purposes.

We invite you to read our privacy policy at www.lifetime.com

REGISTER today!

Level Surface Notice:

Surface must be leveled before installation. We recommend building a level work space with a cement or patio style surface. If the surface is not properly leveled, the shed will not assemble correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.

Building Code Notice:

Consult all local building codes, as well as city and county ordinances, to ensure that the construction of the shed does not require a building permit. Proper building permit documentation may be required in your neighborhood, and it would be unfortunate to learn this after constructing the Shed.

Screwdriver Notice:

There is a 1/2" Phillips head screwdriver bit included with the shed hardware. This bit can be used with any power screwdriver or drill. The plastic pieces of your shed can be damaged by overtightening of screws. To avoid damage we strongly recommend the use of a low-powered power screwdriver or a drill that has an adjustable clutch that is set on a low torque setting. If neither is available, use a hand screwdriver. In any case use caution to avoid overtightening the screws.

Floor Puncture Notice:

Sharp objects may damage your floor. If resting sharp, heavy objects on your shed floor, place a block of wood between the sharp object and floor.



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE WARNINGS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

To ensure safety, do not attempt to assemble this shed without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision are essential for proper orientation and to reduce the risk of accident or injury.

- Do not use or store hot objects such as grills, blowtorches, welding equipment, etc. in the shed.
- If using a ladder during assembly, use extreme caution.
- Two capable adults are required for shed assembly. (It is also recommended that a third adult function as an instruction reader.)

Most injuries are caused by misuse and/or not following instructions. Use caution when using this shed.



Read This First!



Before Beginning Assembly:

- A. Read the "Congratulations" letter on pages 4-5.
- B. Remove Parts List from the center of these instructions and make sure all parts are present and in good condition.
- C. Find the color "Construction Tips" flyer and refer to it during assembly.

Do Not Contact the Store!

For Assistance, including missing or broken parts, Call Customer Service at:

1 (800) 225-3865

KEY



Indicates a helpful hint or important note.



Indicates that a hand screwdriver is required for a step.




Refers you to a specific step in the full-color Construction Tips flyer.

Caution: If more than 6" of snow accumulate on the roof of the shed, carefully remove the snow to avoid possible roof collapse. While standing on the ground, remove the snow from the roof with a broom or snow shovel. Do not stand on the roof to remove snow.



Two Adults Required for Assembly

(+ one Adult suggested as an instruction reader)

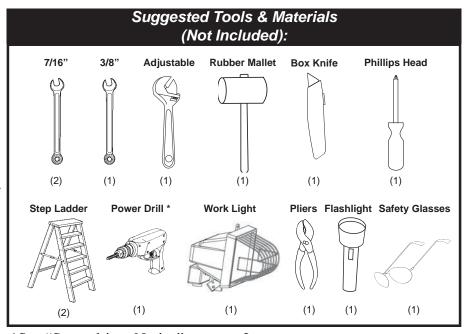

*See "Screwdriver Notice" on page 2

^{**} Customers outside of the U.S. or Canada, please contact the store for assistance. **

IMPORTANT! Please Read

Dear Valued Customer,

We would like to congratulate you on your purchase of a Lifetime[®] Outdoor Storage Shed! We are confident that you have made the perfect choice and you will be very pleased with your new storage solution.

This Outdoor Storage Shed is part of the family of brands created and manufactured by Lifetime® Products, Inc. Like all of our products, you can be assured that the quality of your Lifetime Outdoor Storage Shed is the best in the world! All of our sheds are made in the USA, something that is very important to us. And, we back that quality up by offering the best warranty in the business – A 10-year warranty that covers everything on the shed... top to bottom!

All of our sheds are built with the highest-quality steel and polyethylene parts. The design and construction of our steel-reinforced double-wall panels is second to none. All of our exposed steel parts and trusses are powder coated and we only use high-impact polyethylene plastic. What makes polyethylene so special? It has superior strength and durability, and, it won't crack or degrade outdoors.

So now that you know the quality you are getting in a Lifetime® Outdoor Storage Shed, please take the time to READ THIS INSTRUCTION MANUAL!

We have taken great care in providing the best possible form of instructions to help you put your new Outdoor Storage Shed together. Before you get started, PLEASE read the following preparation tips to help you get started!

We can assure you, your construction experience will be a lot more enjoyable if you do!

PREPARATION TIPS:

- The first step is simple... RELAX! You have made a great purchase, but Rome was not built in a day. Plan to spend a good part of your weekend putting together your fine Outdoor Storage Shed. Our philosophy is, if it comes together quickly and easily, it surely will come apart quickly and easily! Your Lifetime® Outdoor Storage Shed will surely last for years if you are patient, and take all the time necessary to put it together as we have instructed.
- Grab a friend to join in on the fun! This is not a one-person endeavor. We have found that not only will things go smoother if you have two or more people participating in the construction of the shed, but it will go quicker as well. So, the more the merrier!
- Make sure you have all the tools necessary for constructing your new shed. We have included a 1/2 "Phillips head screwdriver bit that may be used with any power screwdriver or drill. This bit is your friend... please use it. The plastic pieces of your shed may become damaged by overtightening the screws. To avoid this damage, we strongly recommend the use of a low-powered power screwdriver or a drill that has an adjustable clutch that is set on a low-torque

setting. If neither is available, use a hand screwdriver. If a hand screwdriver is all you have, take several breaks... your wrist will need it!

- You will also need two small step ladders (when it comes time to do the roof!), a 7/16" wrench and a 3/8" wrench.
- The small wood block in your shed box is there for a reason. DO NOT THROW THE WOOD BLOCK AWAY, it is necessary for attaching the wall panels to the floor.
- Read through the entire instruction manual and "Construction Tips" insert before you start. It's always a great practice to get a feel for the flow of the process and to familiarize yourself with the parts involved. But, try not to get ahead of yourself and start the process out of order.
- **FOLLOW THE INSTRUCTIONS IN ORDER!** Everything goes together in a certain order, and we have learned what that correct order should be. In our state-of-the-art research and testing facility, we have painstakingly created these instructions. The order of construction is there for a reason, and some parts simply will not fit if built out of order. Just follow along with the order in the instructions and everything will fit together and things will go very smooth.
- Refer to the color "Construction Tips" insert for the trickier construction spots. We have identified a few places during construction where it can get a bit tricky, that is why we included the color insert. This full-color instruction extra was created to better guide you through the process. Use it and you will be a much happier Outdoor Storage Shed builder.
- YOUR SHED MUST BE BUILT ON A LEVEL SURFACE! If the spot you have chosen to place your wonderful new Outdoor Storage Shed is not level, the shed will not assemble correctly! We recommend a level cement or patio style surface. Your shed is meant to last a long time, so provide the proper foundation for it before you start to build.
- Before you build it, make sure you are allowed to build it! Consult all building codes, as well as city and county ordinances, to ensure that you do not require a building permit to construct your Outdoor Storage Shed. Proper building permit documentation may be required in your neighborhood, and it would be quite unfortunate to learn this after your Outdoor Storage Shed is already built!

Now that you're ready to begin the construction of your wonderful new Outdoor Storage Shed, step back, take a deep breath, get yourself a large cold beverage and enjoy yourself. We guarantee that after spending the right amount of time in building your shed, you will be able to enjoy it for years to come.


Thanks for choosing Lifetime® Outdoor Storage, and have fun!

(1)

Site Selection

1.1: The actual dimensions of your shed (at its widest and longest points) are 8' x 12 1/2'. Be sure to select a site that will accommodate these measurements. The base of the shed is slightly smaller than this, so you will need to create a level surface that is no more than 93 1/2" x 148". We recommend using a level cement or patio style surface. This will provide the best long-term performance for your shed.

ATOH.

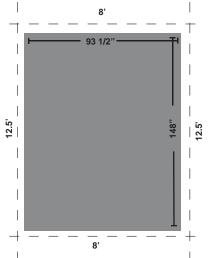

NOTICE: Shed Extension Kits are available for this shed. Please consider possible shed expansion when planning the site for your shed. See inside the back cover of this manual for information on ordering Extension Kits.

Surface must be leveled before installation. If the surface is not properly leveled, the Outdoor shed will not assemble or function correctly. Proper surface leveling will save you time in the long run, so please do not ignore this step.


Alternate Site Preparation

Wherever possible you should use the surfaces described above. When this is not possible, we recommend you use one of the following options:


OPTION 1: Wood Platform

Opt 1.1: Be sure you use lumber that is treated and approved for outdoor use. Build outside frame to 93 1/2" by 148" outside dimensions:


Item	Qty.
2" x 4" x 90 1/2" treated board*	11
2" x 4" x 148" treated board*	2
48" x 93 1/2" Plywood (ACX/Exterior)	3
4" x 93 1/2" Plywood (ACX/Exterior)	1
16d 3" common nails	32
8d 1 1/2" common nails	36

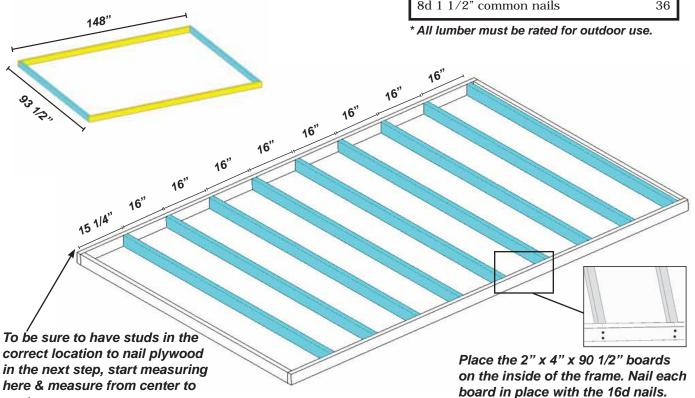

center

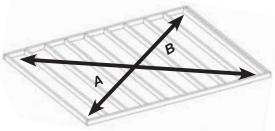

Square up the frame by measuring from corner to corner. Measurement A should equal Measurement B.

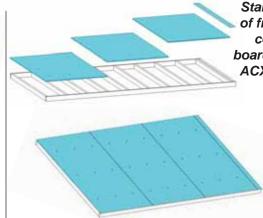

Start Laying plywood at end of frame with the 15 1/4" oncenter gap between 2"x4" boards. Nail 3 large sheets of ACX plywood (48" x 93 1/2") in place.

> Cut last sheet to fit remaining space (4" x 93 1/2") on frame. Nail plywood in place.


> Drill 3 evenly spaced 1/2" drain holes in plywood between each 2" x 4" joist.


Place platform in the desired location. If platform does not rest level on the ground, build up low points with loose dirt until platform is stable.

OPTION 2: Filled Wood Frame


Opt 2.2: Be sure you use lumber that is treated and approved for outdoor use. Cut outside frame to 8 foot by 12.5 foot outside dimensions:

> Lay the boards flat with the widest ends facing up. Ensure that frame is

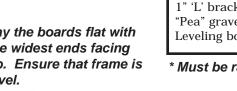


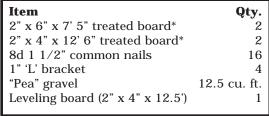

* Must be rated for outdoor use

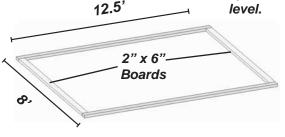

Nail an L-bracket on each corner of the frame with 8d nails.

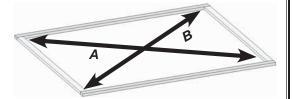


Square up the frame by measuring from corner to corner. Measurement A should equal Measurement B.

Place platform in the desired location. If platform does not rest level on the ground, build up low points with loose dirt or "Pea" gravel, until platform is stable.



Once all boards are level and do not wobble, pack "Pea" gravel around the outside of the frame, and slope away from frame.

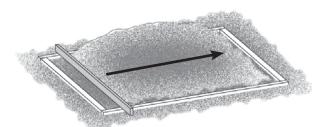


Now fill the inside of the frame with "Pea" gravel. Use a leveling board to scrape off extra fill material and to level the surface.

Before Beginning!

Remove the Parts List from the center of this manual, and locate color "Construction Tips" insert in box.


2 Assemble Floor


2.1: Lay Outer Floor Panel (109) flat on the ground. Hold a Center Floor Panel (110) at an angle (as shown) and fit tabs into slots and lay Center Floor Panel flat. Add next two Center Panels (110) and last Outer panel (109).

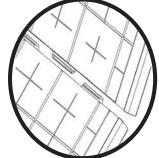

CAUTION

Sharp objects may damage your floor. If resting sharp, heavy objects on your shed floor, place a block of wood between the sharp object and floor.

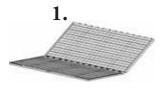

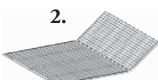







3 Assemble Window


3.1: Remove plastic sheeting from windows (AA) and slide a window into slot on each Window Wall Panel (125). Attach a window latch (HQ) above each corner of the Window as shown. When tightening Screws, be sure that Window Latches will slide freely. Do not overtighten. Insert Screw (TC) into the hole in the window. Set panel aside.

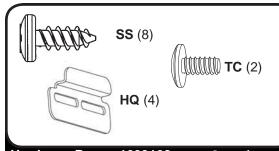



Hardware Bags: 1033168 1001693, 1033417 Screwdriver

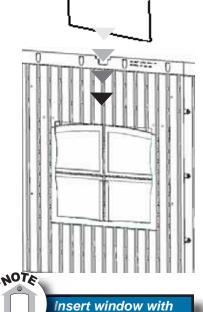

bent edge at top and pointing away from

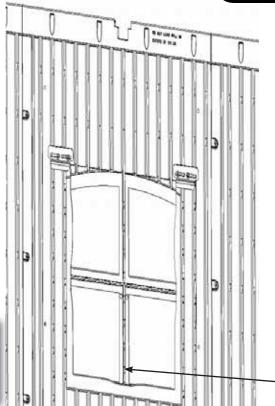

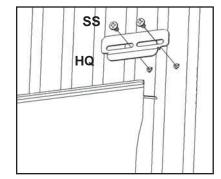

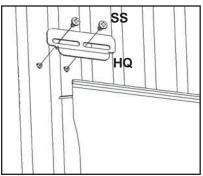

Place Screw (TC) in this hole to keep window from sliding up too far. Insert until flush with the window


the wall.

(4)


Assemble Front Corner

4.1: Fold Left Corner Panel (105). Fit tabs of panel into the front left corner (while facing shed) of your floor. Place a wood block under floor panel, directly under first tab, then pull down on Corner panel until tab snaps into place. Move block under the next tab and repeat.




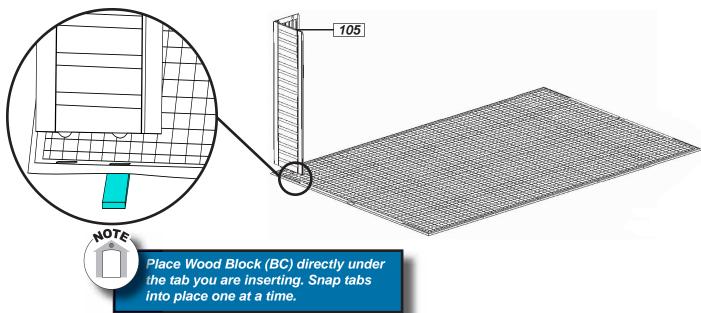


4.2: Fold up edges of Corner Shelf (121). Line-up holes in Corner Shelf with top set of pre-made holes in Left Front Corner Panel and secure with Screws (SS).

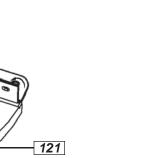



Corner Shelf should only be placed in top set of holes. See inside the back cover for information on purchasing additional shelves.

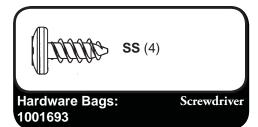


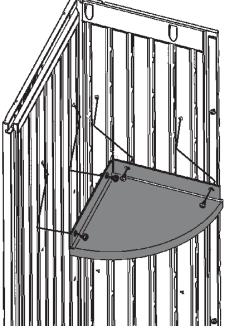

Top holes

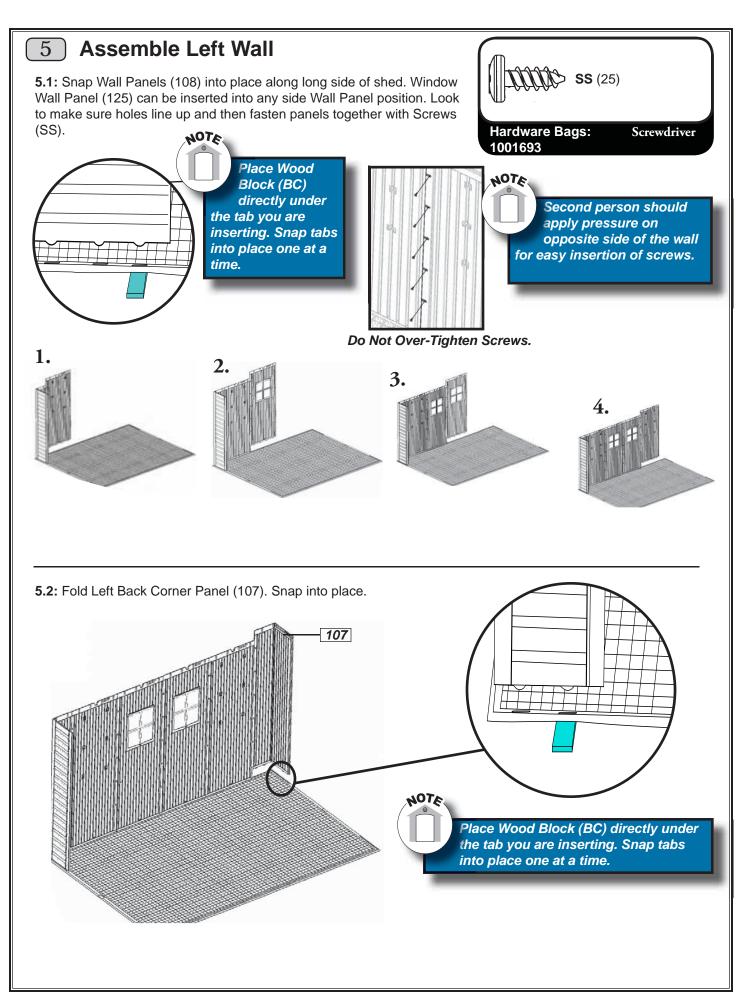

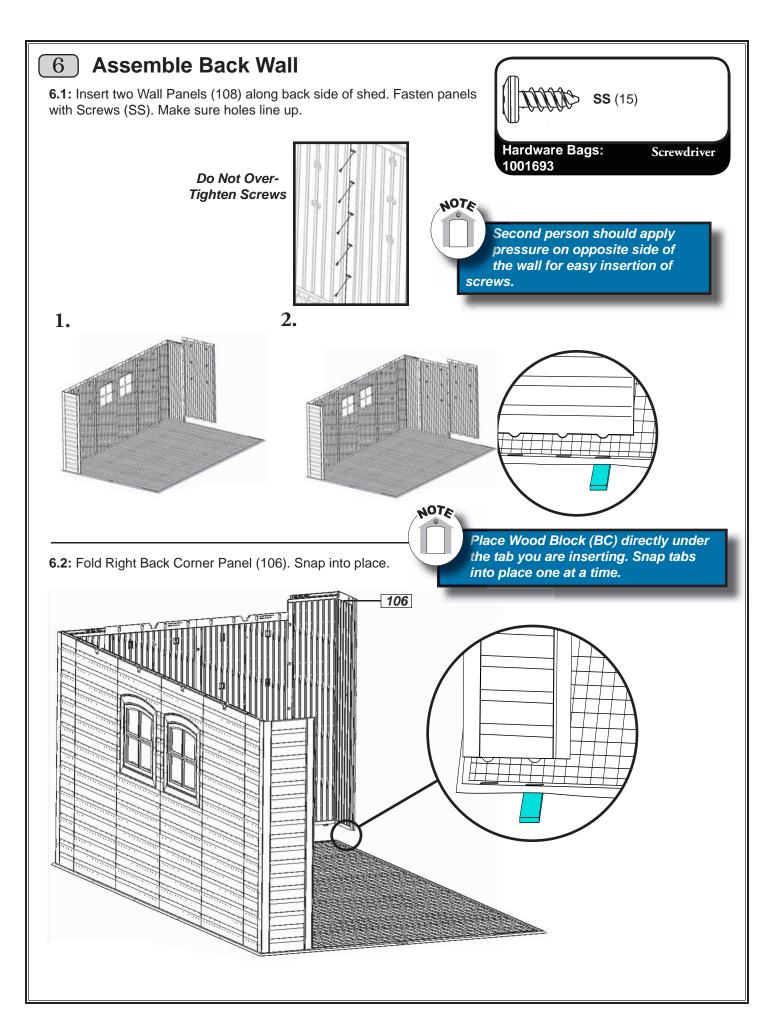

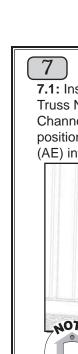


Install Back Shelf

7.1: Insert a Shelf Support Channel (AF) into the slot directly below the Right Truss Notch, and secure with Screws (SS) beginning at the bottom of the Channels and working up. Insert a second Shelf Support Channel (AF) in the position shown in Fig. 1. and secure with Screws. Set a Shelf Support Bracket (AE) into the top location of each of the Shelf Support Channels.

HOTE

Insert

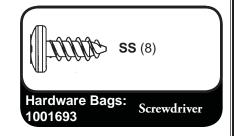



the channel to insert


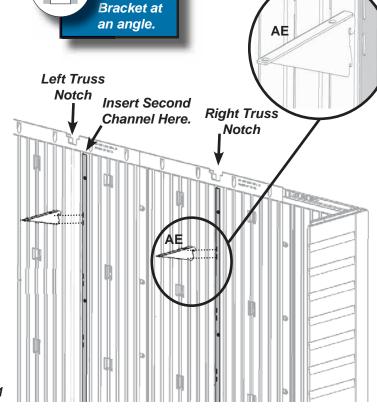





Fig. 1


7.2: Fold up flaps on end of 8' Long Shelf (120). Set shelf on brackets with indentations toward wall, and Screw (SS) into place.

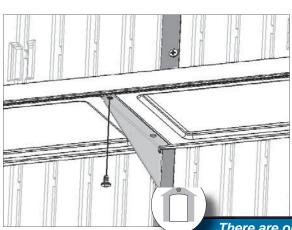

There are only holes for screws along front side of the shelf (front is labeled "Front" on underside of shelf).



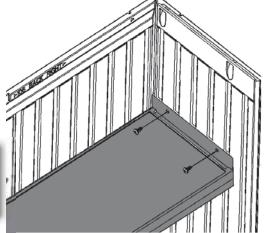


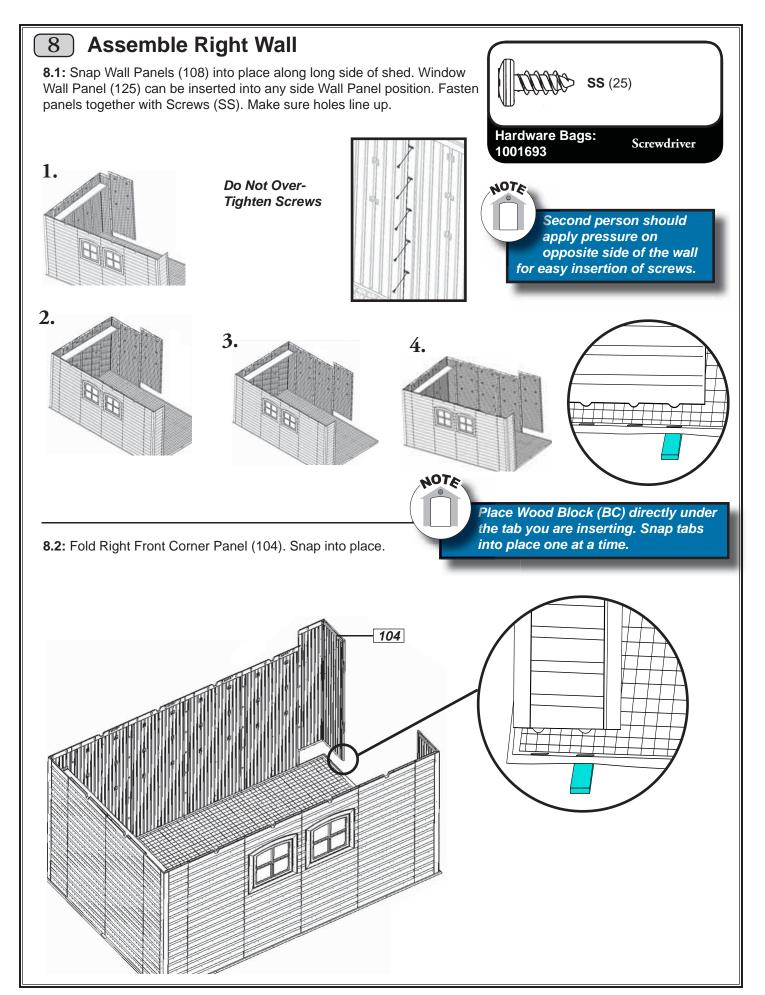





9 Install Corner Shelf

9.1: Fold up edges of Corner Shelf (121). Line-up holes in Corner Shelf with top set of pre-made holes in Right Front Corner Panel and secure with Screws (SS).

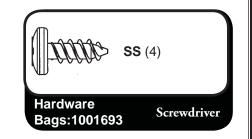

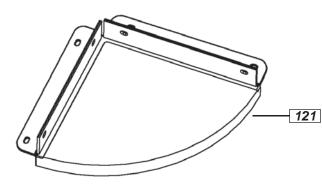


Top holes

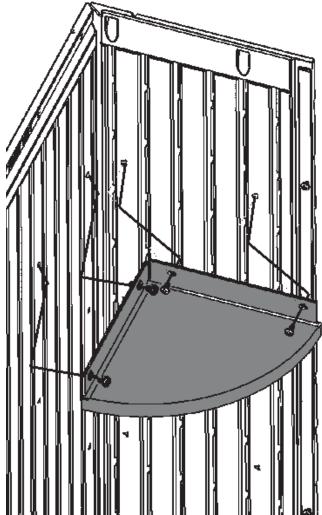


Corner Shelf should only be placed in top set of holes. See inside the back cover for information on purchasing additional shelves.

3704

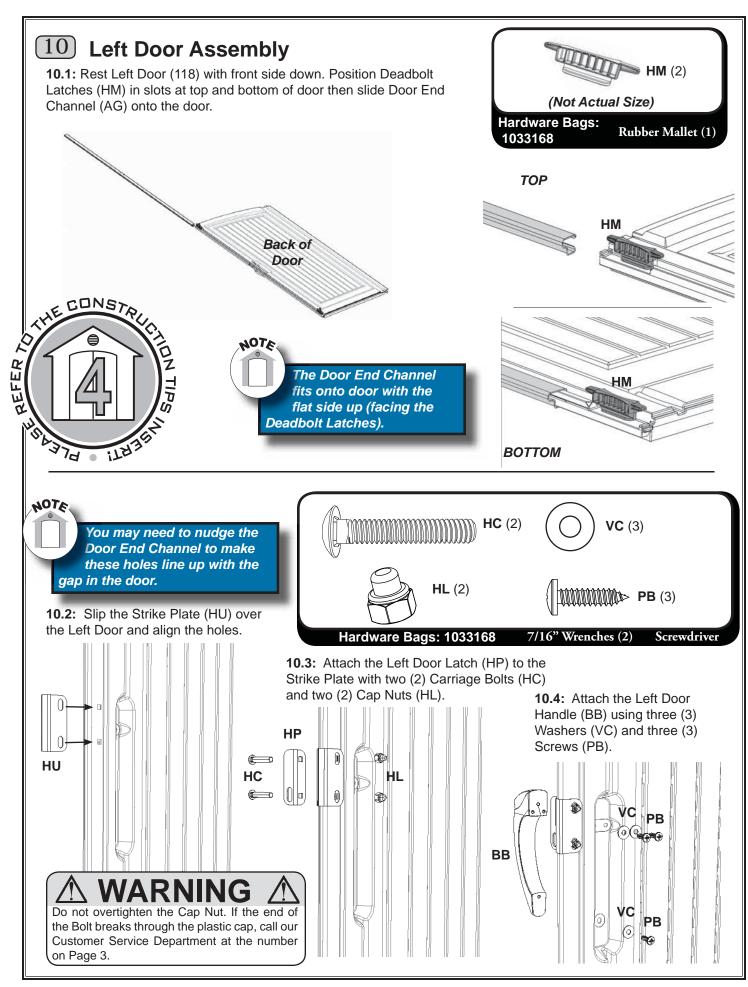


11 Right Door Assembly

11.1: Rest Right Shed Door (119) with front side down, then slide Door End Channel (AG) onto the door.

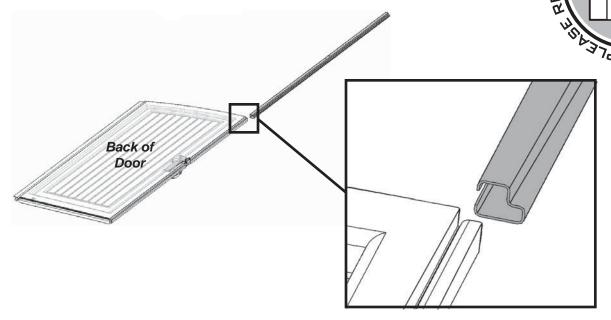


11.2:


1. Fit Thumb Lever Knobs into Handle Grooves.

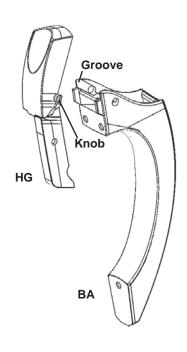


2. Rotate the Thumb Lever into the handle. Slide forward until the Knobs fit into the holes in the handle.

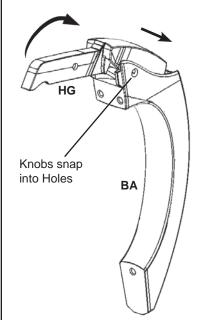



Do not overtighten. Overtightening may damage parts and void

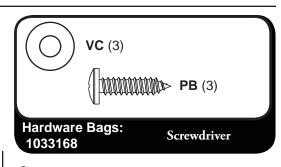


3. Attach the Handle and Thumb lever to the Door.

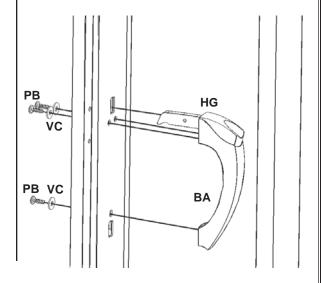


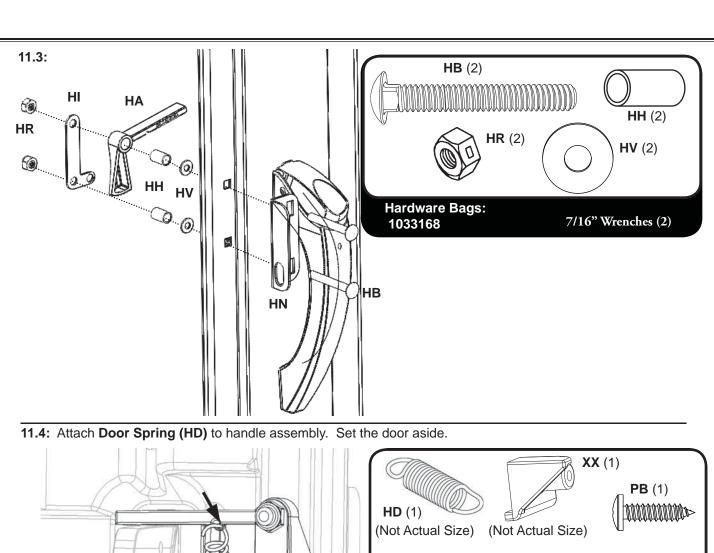


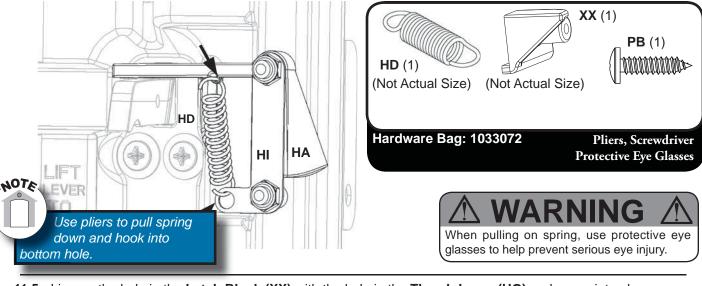

11.5: Line up the hole in the Latch Block (XX) with the hole in the Thumb Lever (HG) and screw into place.

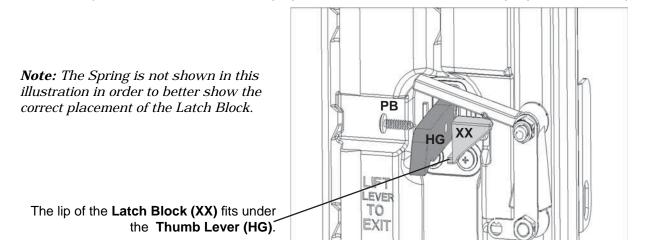


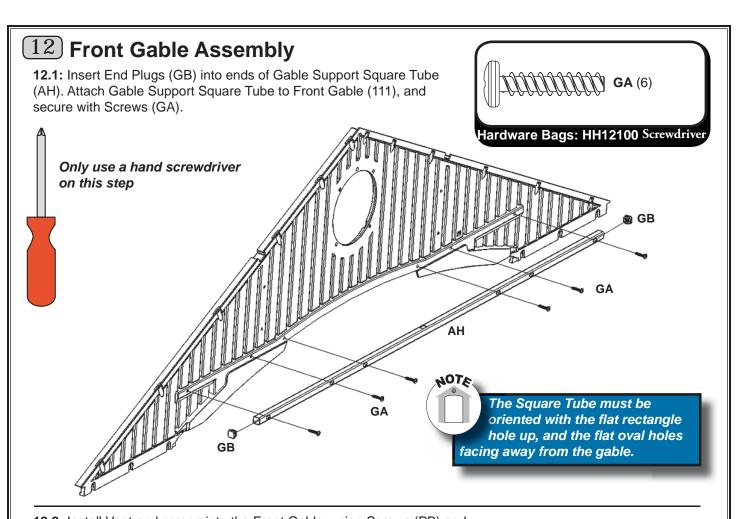

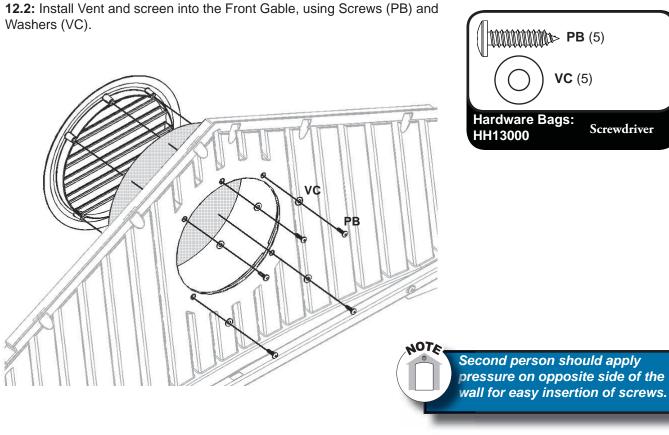

Before Beginning Assembly

Remove this Parts List and Hardware Identifier from the Instructions and take an inventory of all parts in both boxes.

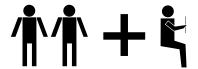

Two Adults Required for Assembly


(+ one Adult suggested as an instruction reader)


Parts List

Box	1 (Larger	Box)			ID	Reorder #			Qty
	_							Bag [1033072]	
ID	Reorder #	Part #	Description	Qty		1032675		Thumb Lever	1
Main	Hardware				PB	BS05800		#10 x .75" Pan-head Screw	1
109	1020143	1008660	Outer Floor Panel	2	XX	1023505		Thumb Lever Latch Block	1
110	1029724	1027375	Center Floor Panel	3	HD	1023731		Latch Spring	1
111	1034880	111	Front Gable	1			ırdware	e Bag [1001883]	
112	1036552	112	Right Back Gable	1	HL	BN00300		1/4" Cap Nut	8
113	1036553	113	Left Back Gable	1	SA	BB04500		1/4" Threaded Rod	4
114	1009262	1009258	Lower Roof Panel	10		light Hardwaı	re Bag [
115	CB11580C	115	Front Roof Cap	1	LA	BS05900		#10 x .5" Pan-Head Screw	
116	CB11680C	116	Back Roof Cap	1	LB	BW01200		#10-1" Fender Washer	32
117	CB11780C	117	Center Roof Cap	4	Doo	r Handle Har	dware E	Bag [1033168]	
118	1033359	118	Left Shed Door	1	HA	AC00100		Latch	1
119	1033360	1008663	Right Shed Door	1	HB	1000118		1/4" x 2" Truss Head Bolt	2
120	1026004	120	8' Long Shelf	1	HC	1000109		1/4" x 1.25" Truss Hd Bo	lt 2
121	CB12180	121	Corner Shelf	2	PB	BS05800		#10 x .75" Pan-head Scre	w 7
126	1035733	1002314	30" Short Shelf	2	VC	BW01300		#10 Washer	6
AC	1021644		Roof Truss Brace	4	ΗН	BA05700		.375" x .56" Steel Spacer	2
AD	1021645		Roof Truss Channels	8	HI	1021484		Latch Cover Plate	1
AF	1021647		Shelf Support Channel	2	HL	BN00300		1/4" Cap Nut	2
AG	1021483		Door End Channel	2	HM	1020983		Deadbolt Latch	2
AH	1021626		Gable Support Sq. Tube	1	HN	1021406		Right Door Latch	1
AJ	1009232		Skylight	5	HP	1021405		Left Door Latch	1
AI	1021649		Roof Support	10	HR	300022		1/4" Centerlock Nut	2
					HS	1014524		Door Hinge Bushing	2
Pov	2 (Smalle	r Boyl			НТ	1015692		Door Hinge Cotter Pin	2
DUX	2 (Silialie	i box)			HU	1014394		Strike Plate	1
					HV	BW00300		1/4" Flat Washer	2
ID	Reorder #	Part #	Description	Qty	Ven	t Hardware B	ag [HH1	13000 x2	
Main	Hardware				VA	CH08382	8.	Louvered Vent	1
AA	ZS01200		Window	2	VB	DA03700		Vent Screen	1
104	ZS10482	104	Right Front Corner Panel	1	PB	BS05800		#10 x .75" Pan-Head Scre	w 6
105	1033375	105	Left Front Corner Panel	1	VC	BW01300		#10 Washer	6
106	1033376	1005256	Right Back Corner Panel	1	Froi	nt Gable Hard	ware B	ag [HH12100]	
107	1033377	107	Left Back Corner Panel	1	GA	BS05700		.25" x 1.125" Pan-head So	er. 7
108	ZS10882	1013592	Wall Panel	8	GB	CF03399		End Plug	2
125	ZS12582	125	Window Wall Panel	2		ss Hardware I		O	
			-		TA	1021654	Jug [10.	Truss Connector	4
Shad	Parts Box	[1022/1	61		НК	BN01600		Cap Nut	26
		-	-	٥.	TC	BS06100		#10 x 3/8" Pan-Head Scr.	
ID	Reorder #	Part #	Description	Qty	TD	DA04000		L-Key w/Phillips Head	1
	Hardware				TE	BA07000		#2 Phillips Bit	1
AE	1021652		Shelf Support Bracket	6	TF	CH14082		Gable Clip	2
BC	IA01400		Wood Block	1	HQ	1007360		Window Latch	4
BD	IA01500		Wood Shim	4		d Screw Hard	ware R		-
	Handle Bag [1	033418]			SS	BS07500	ware Da	.25" x .625" Screw	274
BA	1015792		Right Door Handle	1			ardwara	e Bag [1004034]	~ 1 4
BB	1009123		Left Door Handle	1	FA	г Gap глар па СН14199	uware		1
l					FA FB			Left Gap Flap	1 1
					LA	CH14499 BS05900		Right Gap Flap #10 x .5" Pan-Head Screw	_
					LA	D203800		#10 x .5 Fall-neau Screw	4

*Part Numbers are listed when different from the Reorder Number.

The Part Number will appear on most of the plastic parts.

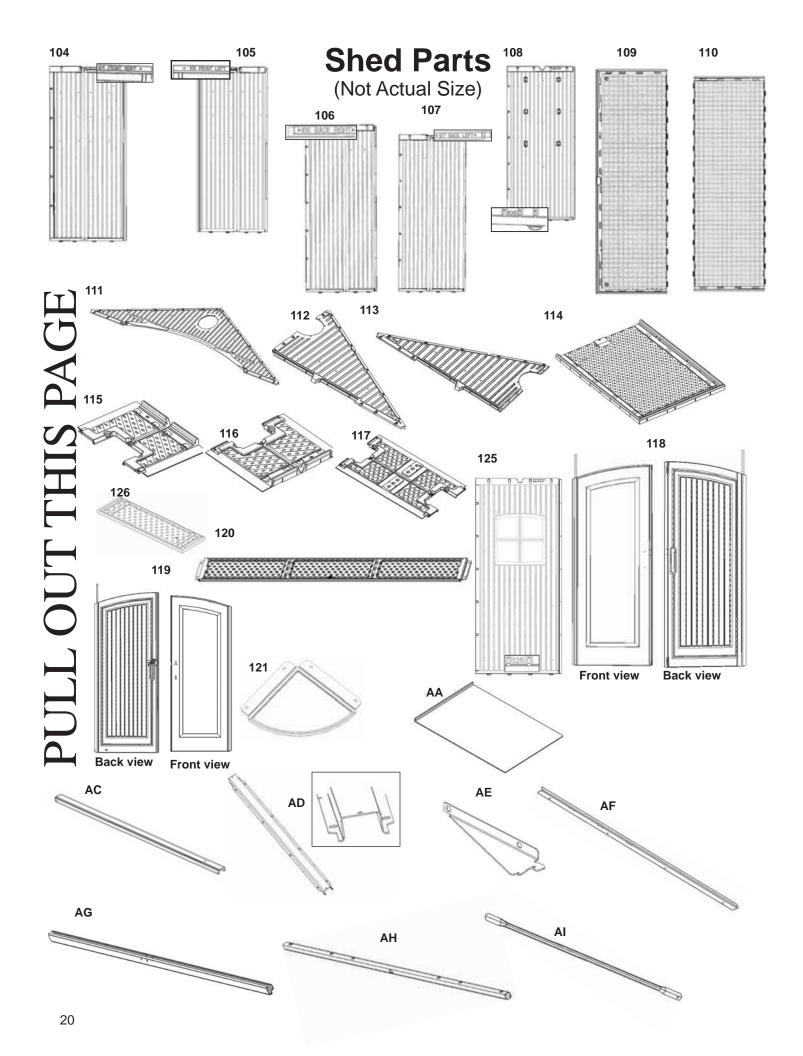

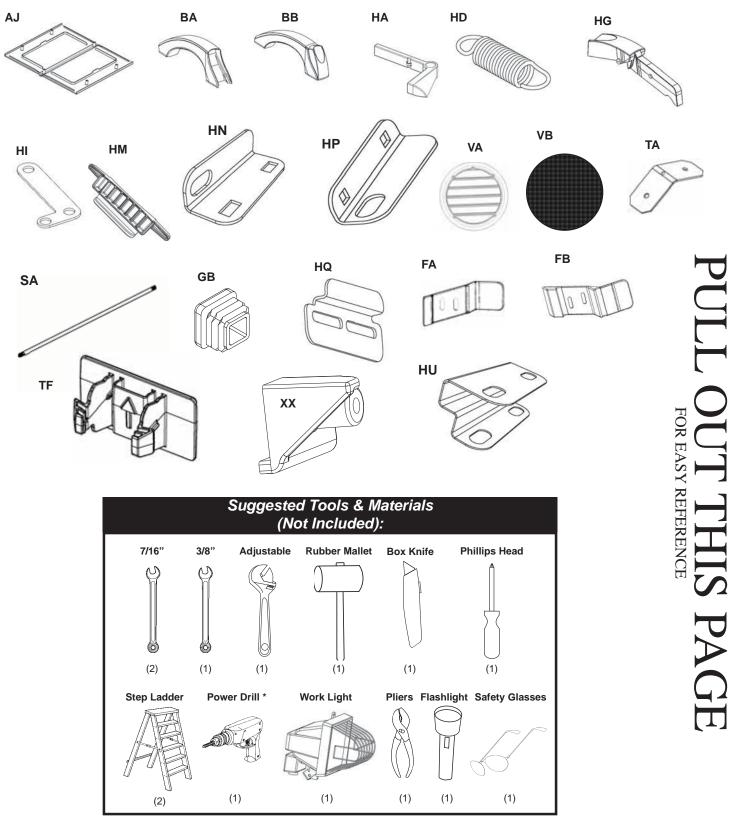

* see "Screwdriver Notice" on page 2

U.S. and Canada customers ONLY

IF ASSISTANCE IS NEEDED, DO NOT CONTACT THE STORE!!!


CALL OUR CUSTOMER SERVICE DEPARTMENT at **1 (800) 225-3865**HOURS: 7:00 a.m. to 5:00 p.m. Monday through Friday (Mountain Standard Time)


Call or visit our Web site for Saturday hours


For customers outside the U.S. or Canada, please contact the store for assistance


Shed Hardware

(Actual Size)

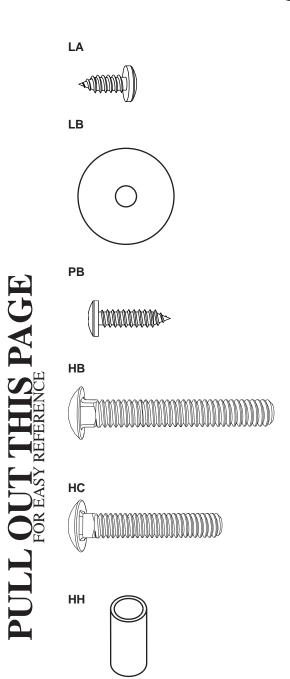

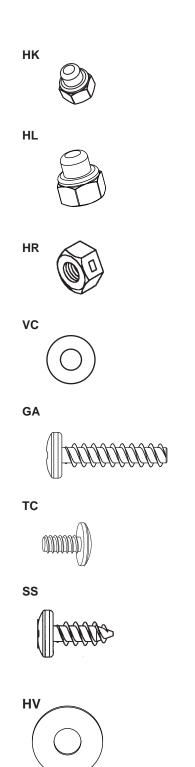


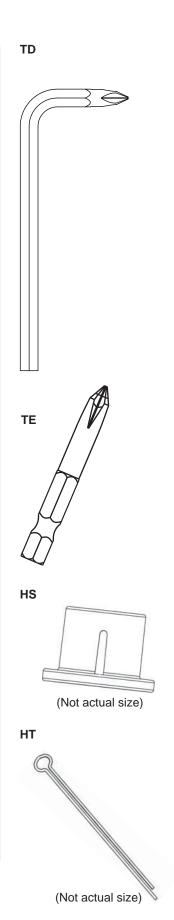

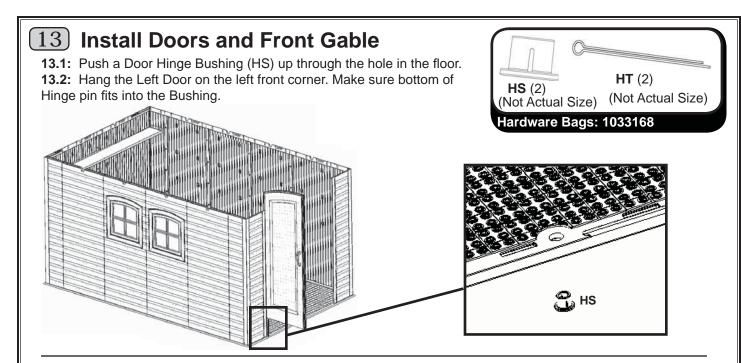


13.3: Push a Door Hinge Bushing (HS) up through the hole in the floor.

13.4: Hang the Right Door on the right front corner. Make sure bottom of Hinge pin fits into the Bushing.

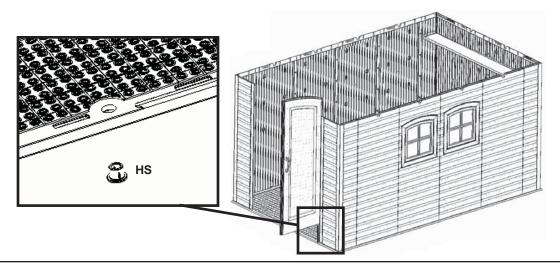


13.5: Insert the Door Hinge Cotter Pin (HT) through the Bushings and Hinges on both Doors.

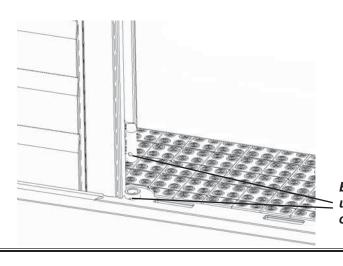

HT


Be sure that these two holes line up, so that the Cotter Pin (HT) can be inserted.

Use pliers to bend back the ends of the Cotter Pin (HT) after it has been inserted.

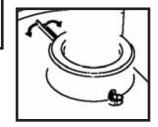



13.6: Install Front Gable.




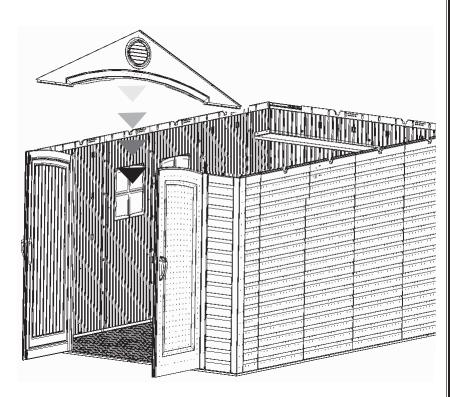



13.7: Secure both sides of Front Gable with Screws (SS).

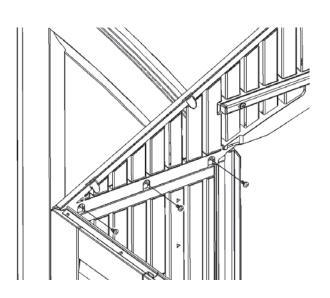


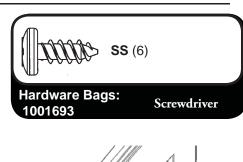

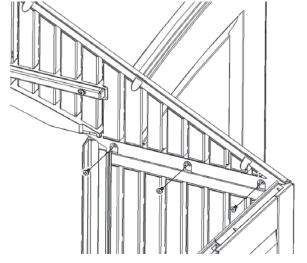

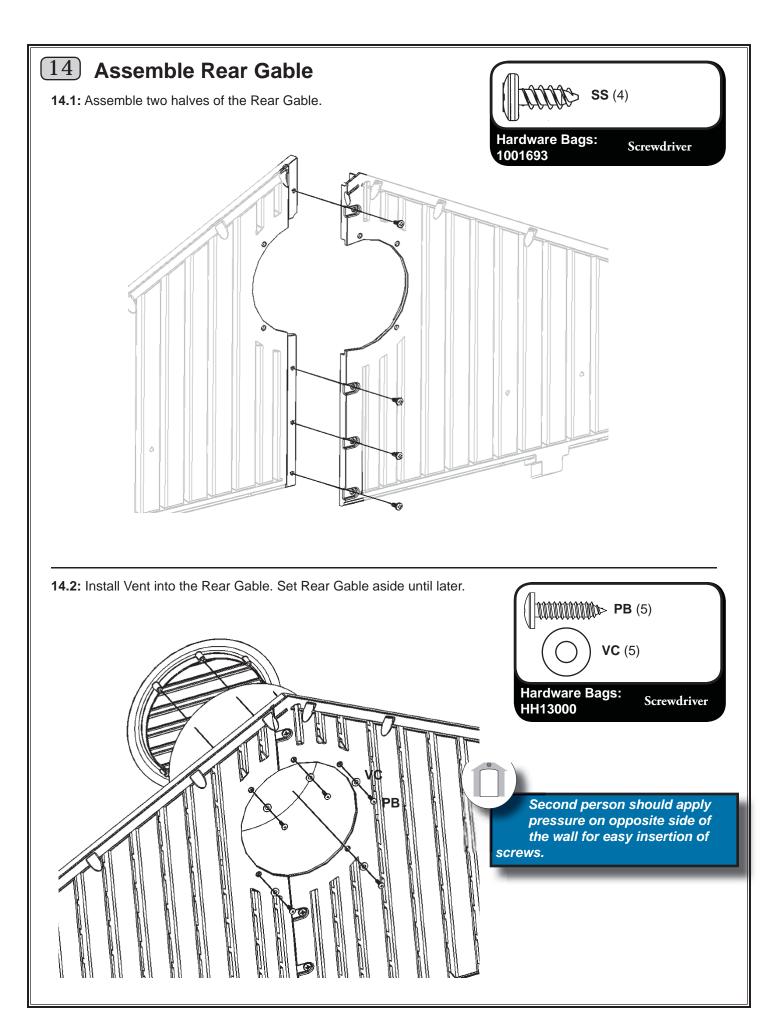

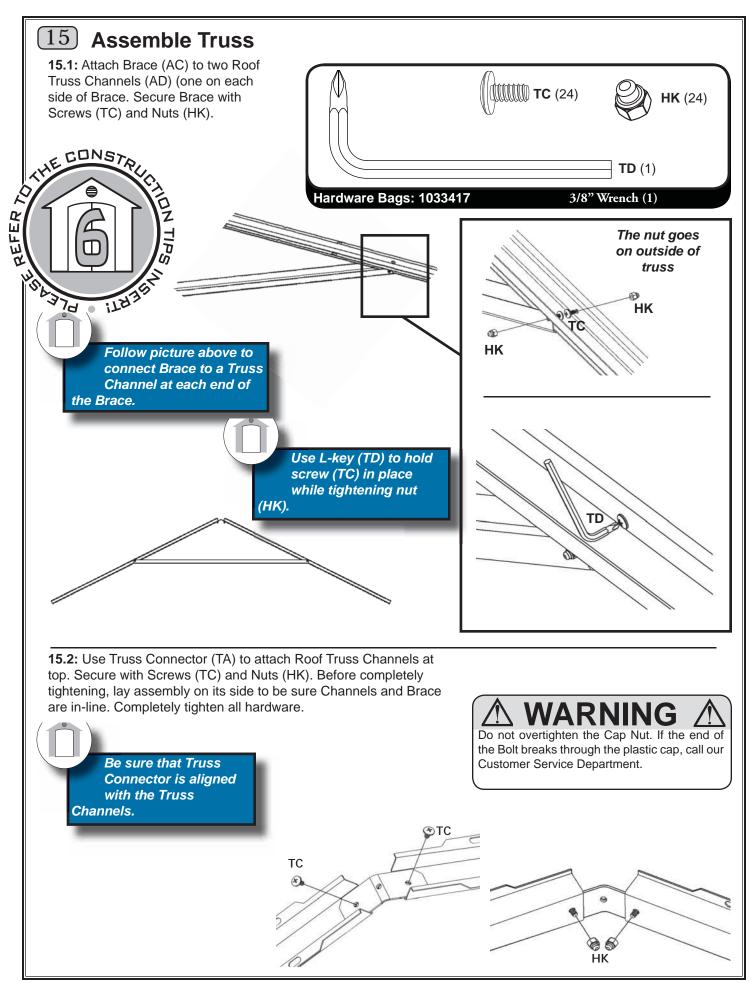


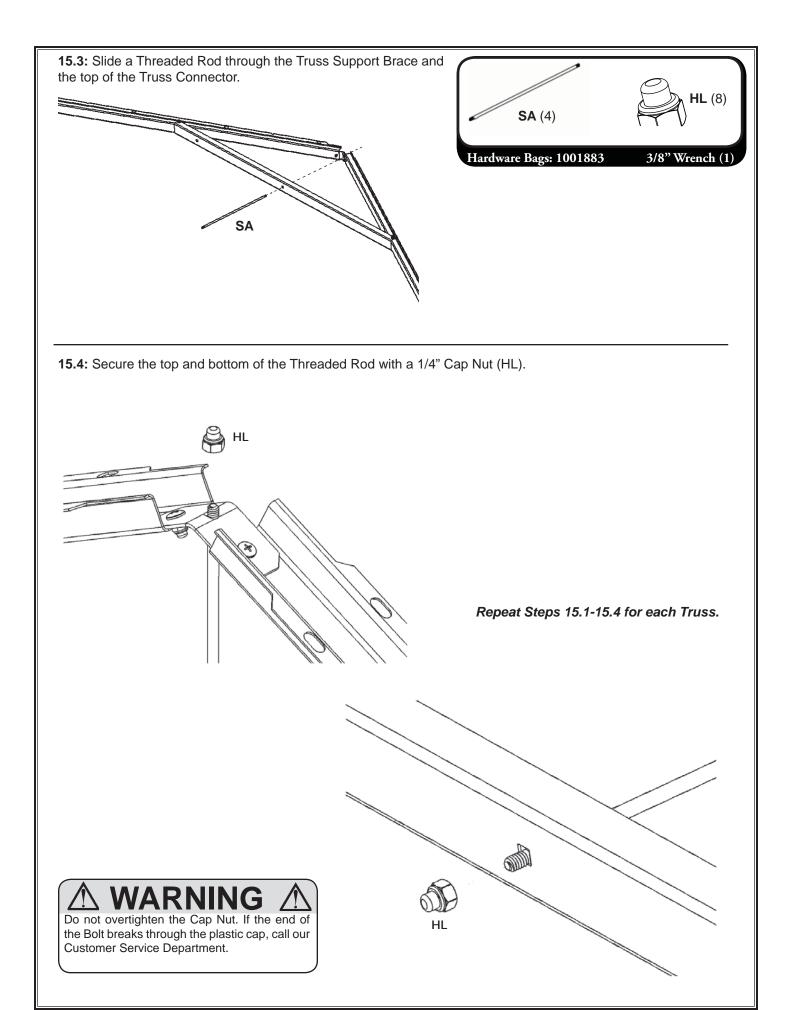


16 Truss & Roof Installation


16.1: Place a Truss into the first set of notches behind the Front Gable.

Be sure to carefully read and follow the roof installation instructions and notes. Following each step in the order listed will minimize potential complications during installation.

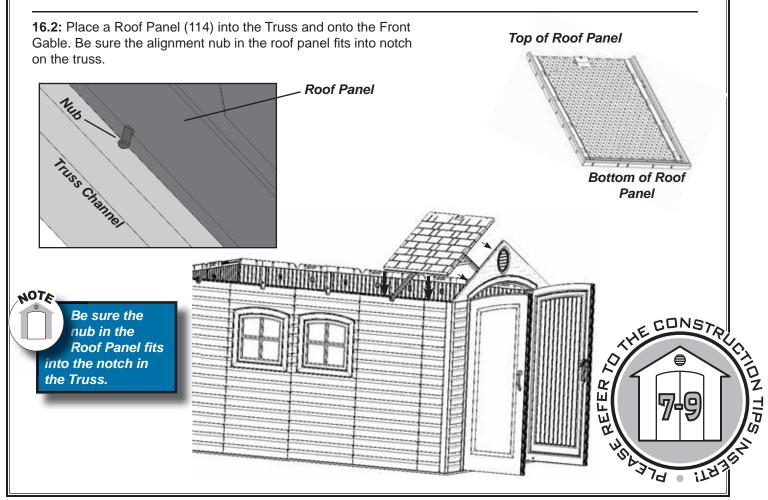


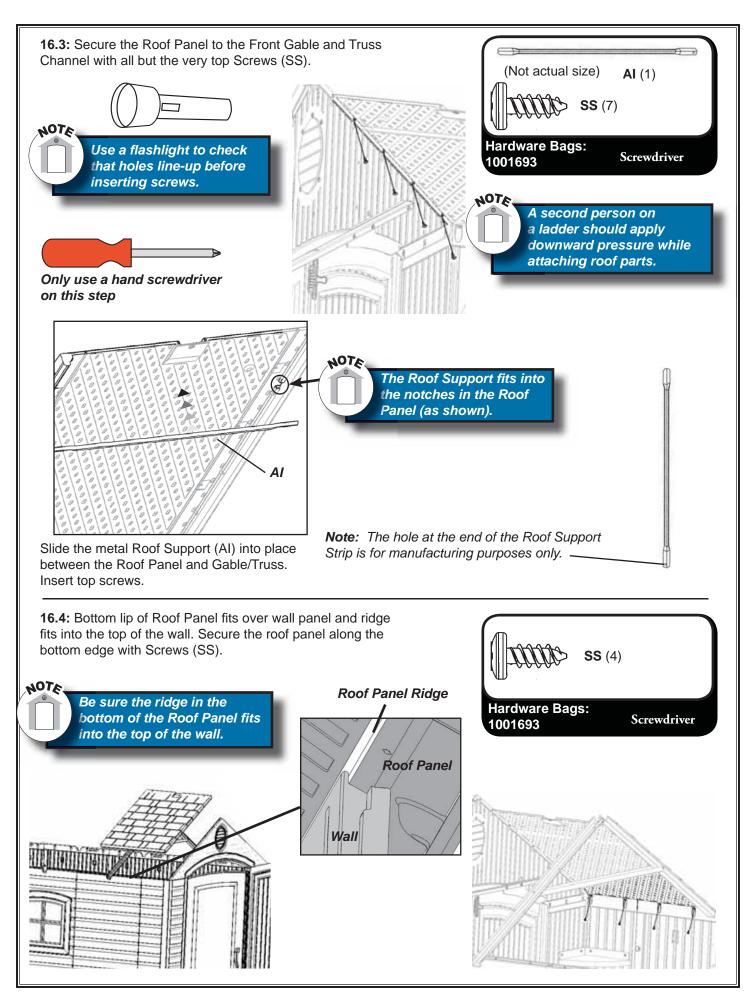


16.5: Follow steps 16.2-16.4 and install a Roof Panel and Roof Support on opposite side.

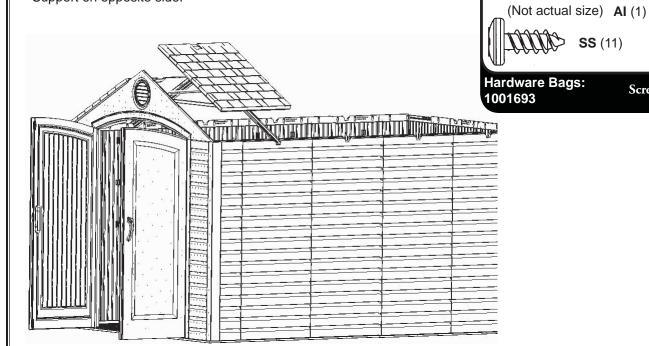


16.6: Position the Front Roof Cap (115) as shown. Secure to Front Gable with Screws (SS).

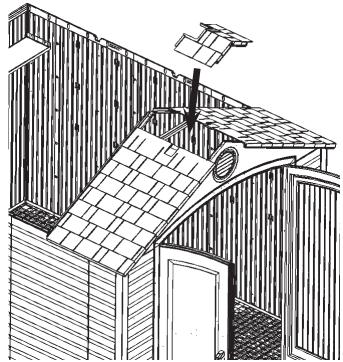

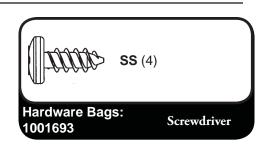


SS (11)

Screwdriver

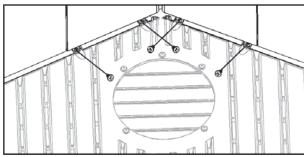



16.7: Install next Truss.

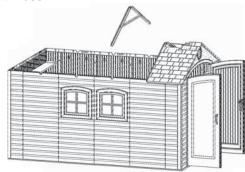

16.8: Follow steps 16.2 - 16.4 to place the next Roof Panels (114) and Roof Supports (AI). Repeat for other side.




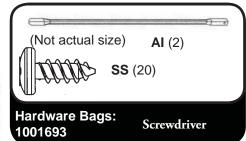


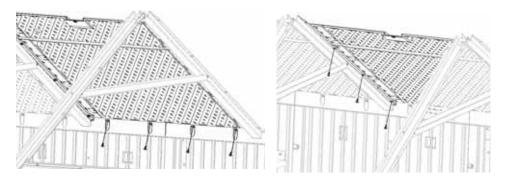

Note: The hole at the end of the Roof Support Strip is for manufacturing purposes only.

16.9: Position Roof Cap (117) next to Front Roof Cap. Attach to Truss with Screws (SS).

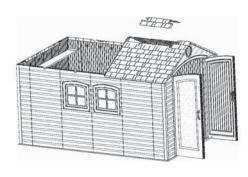

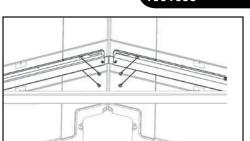








Only use a hand screwdriver on this step

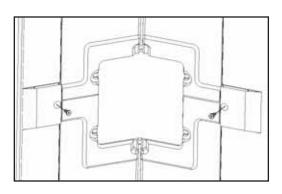





CAUTION


Only hand tighten screws in Roof Caps. Do not overtighten. Overtightening may damage Roof Caps and void warranty.


16.11: Install the next two Trusses, four Roof Panels (114) and two Roof Caps (117).

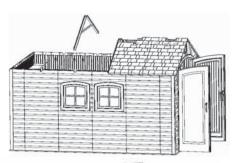





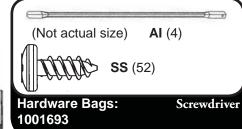


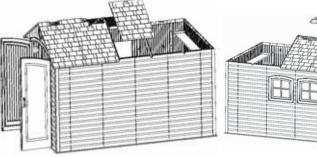

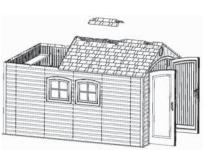

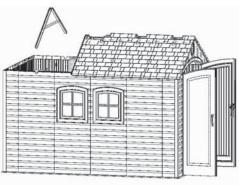

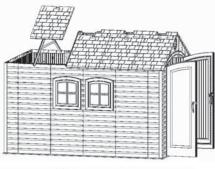


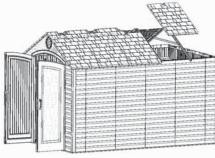





Note: The hole at the end of the Roof Support Strip is for manufacturing purposes only.



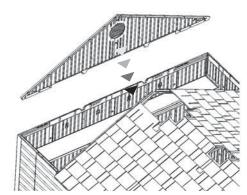





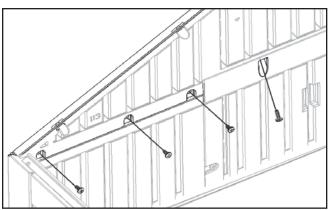


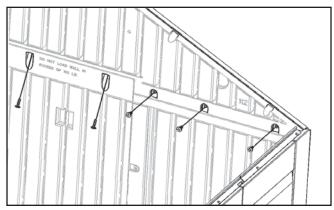


16.13: Install Next Roof Panel.

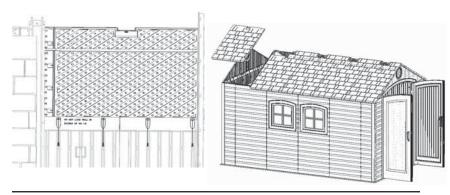


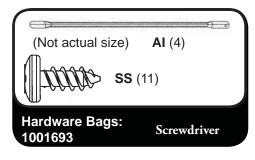


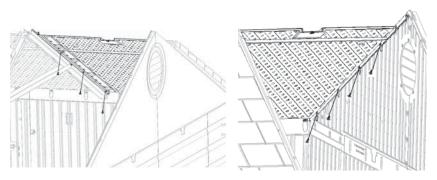



Note: The hole at the end of the Roof Support Strip is for manufacturing purposes only.

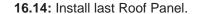


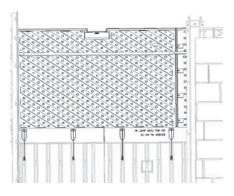

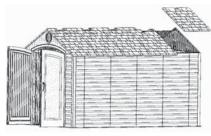

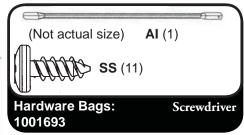


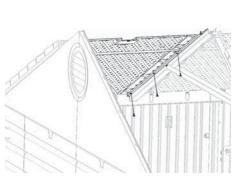

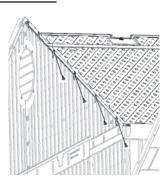

Note: The hole at the end of the Roof Support Strip is for manufacturing purposes only.


16.15: Position and Secure Center Roof Cap (117) along Truss.

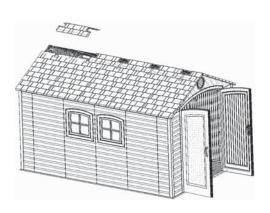




Hardware Bags: 1001693

Screwdriver

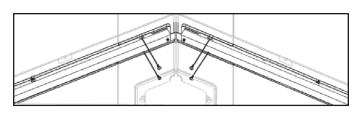

16.16: Connect centers of Roof Caps (117).




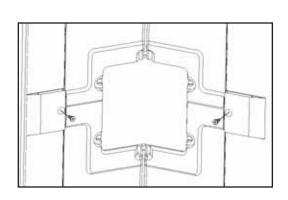




CAUTION


Only hand tighten screws in Roof Caps. Do not overtighten. Overtightening may damage Roof Caps and void warranty. 16.17: Position and Secure Rear Roof Cap (116) along Rear Gable.

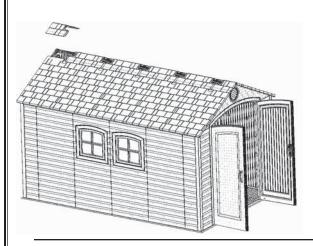




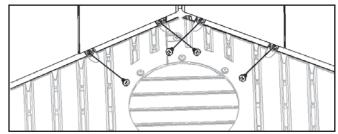

16.18: Connect Rear & Center Roof Caps.

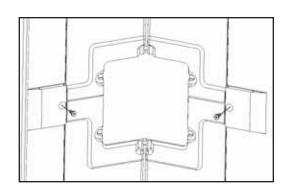


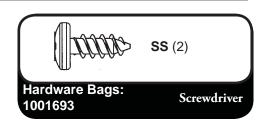

17 Skylight Installation

17.1: Pre-fold Skylight before installing.




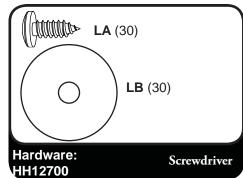

- **17.2:** Push folded skylight up through opening; open skylight; use tabs to pull skylight down into place.
- **17.3:** Fasten skylight in place with Screws (LA) (pull on tabs while inserting screw to provide resistance).







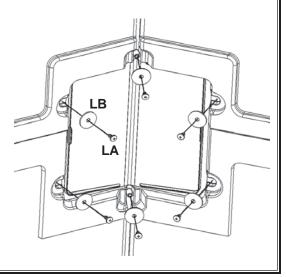


Shelf Installation 18

18.1: Insert Shelf Brackets into notches below the 8 foot shelf. Place Short Shelves (126) on brackets and secure with Screws (SS).

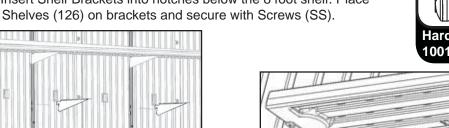

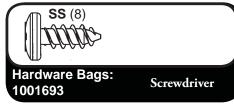

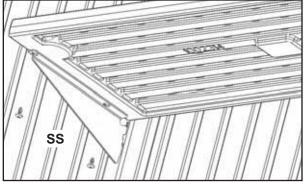

NOTICE

The total weight placed on shelves cannot exceed 50 pounds (24 kg).

Additional Shelf Locations

Additional Shelves and Support Channels can be purchased from Buy Lifetime. These Shelves and Support Channels can be installed on any of the side walls, including Window Wall Panels.

> Two Shelf Support Channels are installed on the same Wall Panel. using the pilot holes at the locations shown.

Attach Support Channels Here.


To purchase shed accessories, visit us at:

www.buylifetime.com Or call: 1 (800) 424-3865

See inside the back cover of this manual for available accessories.

19 Align Doors


19.1: In some cases, the shed doors may not completely line up at the tops (fig. 1). When this happens, identify which side is higher and use a shim (BD) to slightly raise the back corner of the high side until doors line up (fig. 2). If doors need further adjustment, insert another shim under the front corner opposite of the first shim. If the doors still need further adjustment, stack additional shims (one at a time) alternating between the back and front shims.

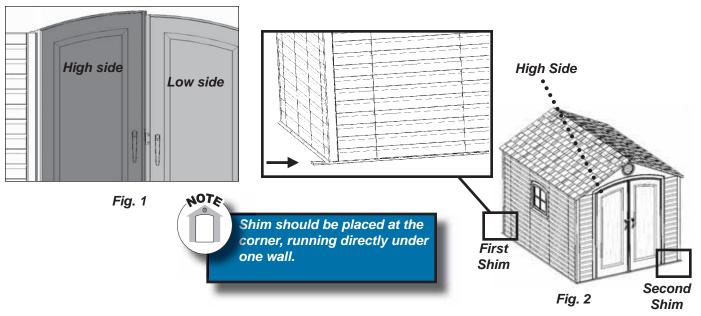

19.2: After doors are aligned, cut off any portion of wood shim that is still exposed. From inside the shed, drive a 1" nail through the floor into the shim to hold it in place.

20 Anchor the Shed


20.1: After assembling your shed, you will need to anchor it to the ground through the four indentations in the shed floor. Consult your local hardware store for suggestions on the best hardware to use for anchoring your shed.

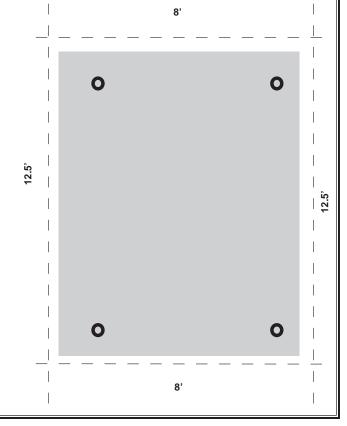




21 Insert Gable Clips in Back Wall


21.1: Insert the Gable Clips (TF) into the back wall as shown.

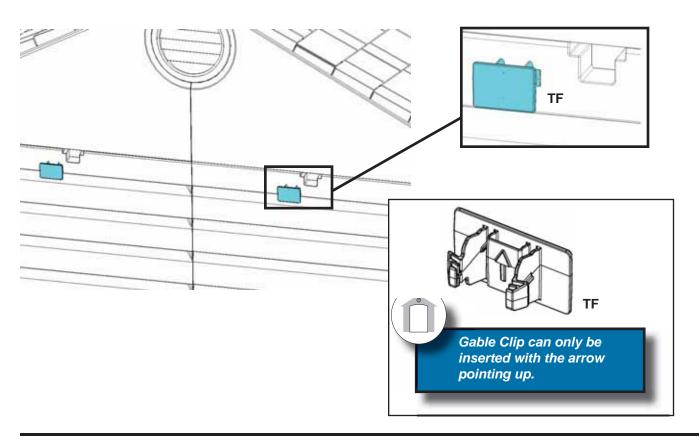


22 Install Gap Flaps on Doors

22.1: Install the Gap Flaps (FA & FB) inside each door as shown. Before completely tightening screws, slide Flap up until it covers any gap between the top of the door and the Gable.

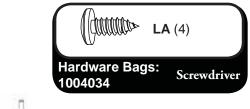


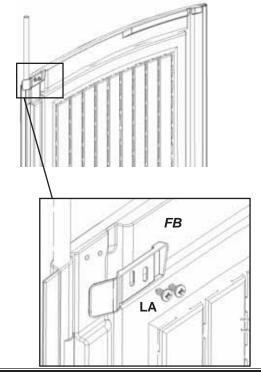

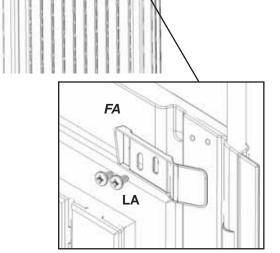

Enhance your Lifetime® Outdoor Shed by purchasing the following Shed Accessories:

Model #	
0110	Corner Shelf (2 pack)
	Two 10" radius Shelves with hardware.
0130	30" Shelf Kit w/ hardware (3 pack)
	Three 30" x 10" Steel-Reinforced Shelves with shelf brackets and
	hardware.
0150	90" Shelf Kit w/ hardware
	One 90" x 9" Steel-Reinforced Shelf with shelf bracket and hardware.
0113	16" Pegboard Strips w/ hardware
	Two sixteen inch Pegboard Strips with hooks. Great for hanging large
	items such as: rakes, shovels, or other tools.
0190	Shelf Support Channel
	Two Shelf Support Channels that allow the 30" shelves on either of the
	side walls of your shed.

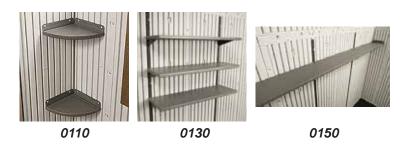

To purchase shed accessories, visit us at:

www.buylifetime.com

Or call: 1 (800) 424-3865

Congratulations on your Lifetime® Outdoor Shed purchase. By following the instructions below, your new Lifetime shed should provide you with years of service and enjoyment.

Cleaning and Care

The polyethylene walls and shelves are stain- and solvent resistant. To clean, use a mild soap and a soft-bristled brush. Abrasive cleaning materials may scratch the plastic and are not recommended. Repair scratches or rust spots on the metal by Sanding the affected area lightly; using a rust preventative spray primer; and finally, spraying with a high-gloss spray enamel paint. Avoid placing a direct heat source on or near surfaces unless using a heat

For warranty details or to register your product, visit www.lifetime.com or call 801-776-1532

LIFETIME OUTDOOR SHED EQUIPMENT

10-YEAR LIMITED FACTORY WARRANTY

THE MANUFACTURER RESERVES THE RIGHT TO MAKE SUBSTITUTIONS TO WARRANTY CLAIMS IF PARTS ARE UNAVAILABLE OR OBSOLETE.

- 1. Lifetime outdoor sheds are warranted to the original purchaser to be free from defects in material or workmanship for a period of ten years from the date of original retail purchase. The word "defects" is defined as imperfections that impair the use of the product. Defects resulting from misuse, abuse or negligence will void this warranty. This warranty does not cover defects due to improper installation, alteration or accident. This warranty does not cover damage caused by vandalism, rusting, "acts of nature" or any other event beyond the control of the manufacturer.
- 2. This warranty is nontransferable and is expressly limited to the repair or replacement of defective product. If the product is defective within the terms of this warranty, Lifetime Products, Inc. will repair or replace defective parts at no cost to the purchaser. Shipping charges to and from the factory are not covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the shed or its components are not covered under this warranty.
- 3. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use or hanging from the truss will void this warranty.
- 4. Liability for incidental or consequential damages is excluded to the extent permitted by law. While every attempt is made to embody the highest degree of safety in all equipment, freedom from injury cannot be guaranteed. The user assumes all risk of injury resulting from the use of this product. All merchandise is sold on this condition, and no representative of the company may waive or change this policy.
- 5. This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Neither Lifetime Products, Inc., nor any representative assumes any other liability in connection with this product.

ALL WARRANTY CLAIMS MUST BE ACCOMPANIED BY A SALES RECEIPT.

REPORT PRODUCT DEFECTS IN WRITING TO: Lifetime Products, Inc., PO Box 160010 Clearfield, UT 84016-0010 or call (800) 225-3865 M-F 7 a.m. to 5 p.m. MST.

Please include your dated sales receipt and photographs of damaged parts.

To register the product, visit our Web site at www.lifetime.com



©2004 Lifetime Products, Inc.

PO Box 160010 • Freeport Center, Bldg. D-11 Clearfield, Utah 84016-0010 T: 800-225-3865 • F: 801-728-1907