








Assembly Instructions

Verona™ 5000 - Carport

Approx. Dim.

500 L x 297.5 W x 218 H cm / 196.8" L x 117.1" W x 85.8" H

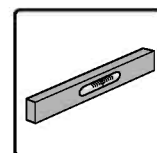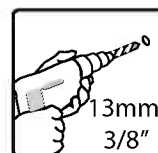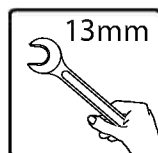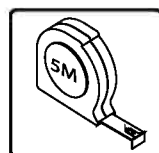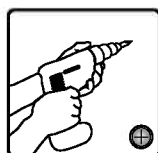

After Sale Service

Email: customer.service@palram.com

USA
Canada

877-627-8476
1 800-866-5749

England 01302-380775
Germany 0180-522-8778

France 0169-791-094
International +972 4-848-6942

www.palramapplications.com

IMPORTANT

Please read these instructions carefully before you start to assemble this greenhouse.
Please carry out the steps in the order set out in these instructions.
Keep these instructions in a safe place for future reference.

» Care and Safety advice

- Please follow the instructions as listed in this manual.
- Sort the parts and check against the list of contents.
- For safety purposes we strongly recommend that the product will be assembled by at least two people.
- Some parts have metal edges. Please be careful when handling components. Always wear gloves, shoes and safety goggles during assembly.
- Do not attempt to assemble the carport in windy or wet conditions.
- Dispose of all plastic bags safely – keep them out of reach of small children.
- Keep children away from the assembly area.
- Do not attempt to assemble the carport if you are tired, have taken drugs, medications or alcohol, or if you are prone to dizzy spells.
- When using a stepladder or power tools, ensure that you are follow the manufacturer's safety advice.
- Do not climb or stand on the roof.
- Heavy articles should not be leaned against the poles.
- Please consult your local authorities if any permits are required to erect carport.
- This product is specifically designed with a minor slope of the roof in order to allow drainage of water flow. Please keep roof and gutters clean of snow, dirt & leaves.
- Heavy amounts of snow on roof can damage the carport making it unsafe to stand below or nearby.
- This product was designed and produced to be a carport only.
- » Some parts of this carport are painted.

If color was scratched during assembly it can be fixed with the following tints:
Gray – RAL 7012

» Cleaning instructions

When your carport needs cleaning, use a mild detergent solution and rinse with cold clean water.
Do not use acetone, abrasive cleaners, or others special detergents to clean the panel.

» Before Starting Assembly

- This carport must be assembled on a solid base (such as concrete or asphalt).
- Choose your site carefully before beginning assembly. Site surface (mainly below poles) needs to be level.

» You will need

- T001 - (supplied)
- (these items not supplied)



» During Assembly



When encountering the information icon, please refer to the relevant assembly step for additional comments and assistance.

Step 5: It is recommended to place a sheet / Carton below the parts to avoid scratches and peeling of paint.

Step 5-6: According to the desired drainage direction, please select the preferred side to place the shorter legs. Please verify both legs #8002 are mounting on the same side


Step 7: At the end of all screws connection to parts, tighten all screws (including screws from previous steps)

Step 13: Place part 7580 underneath each and every panel to support the edge of the panels.



Step 17: Level the profiles legs to the flat surface, and then attach plugs and screws to the ground.

» General:

- Tighten all screws at the end of assembly.

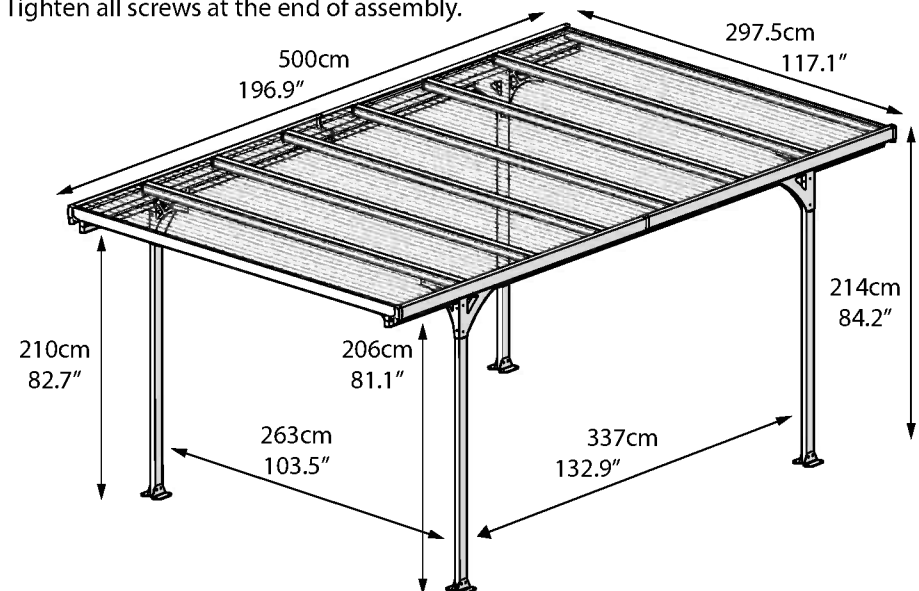


Do not tighten screws and nuts (411 & 412) until completion of assembly process.
These 2 icons indicate if screws' tightening is required or not.






This carport should be assembled on a solid base (such as concrete). Without solid base, pre-foundation, that will include concrete and metal, is needed as in this drawing



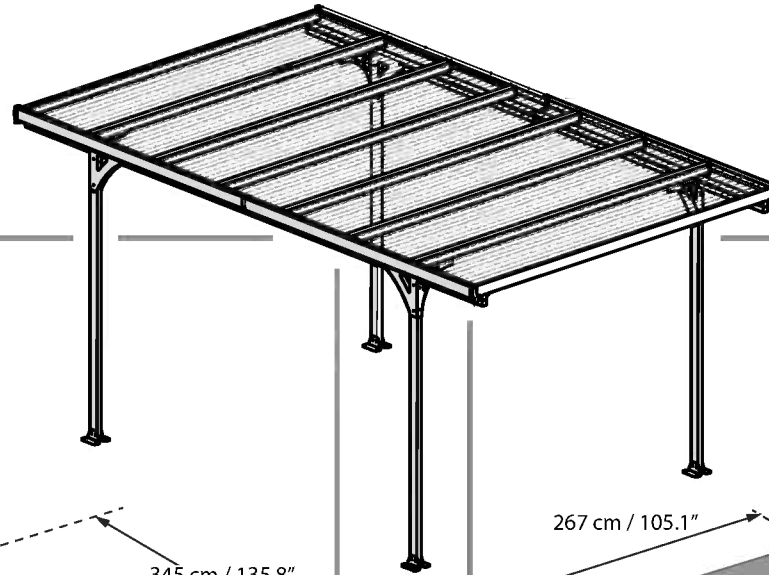


Slabs and concrete pavers


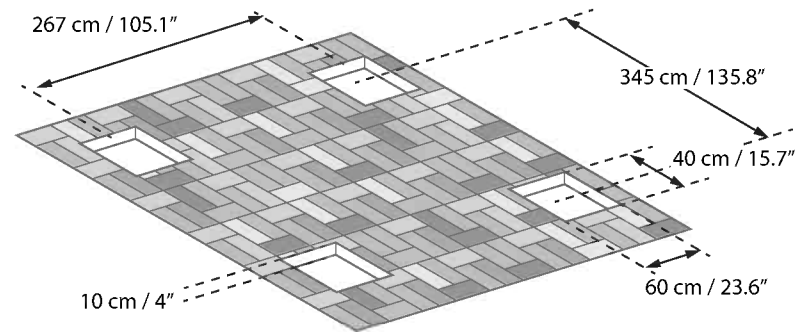









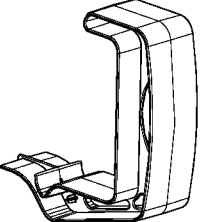


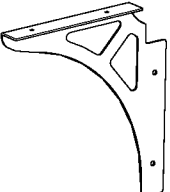

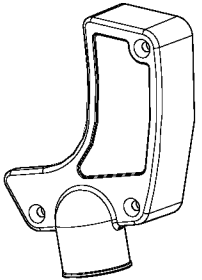
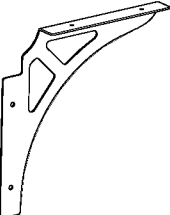

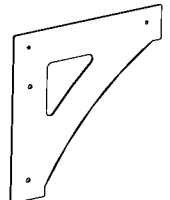

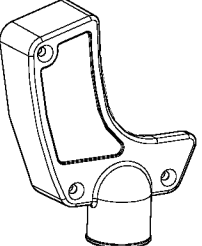



OR




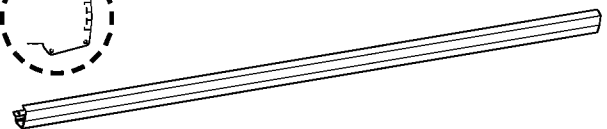

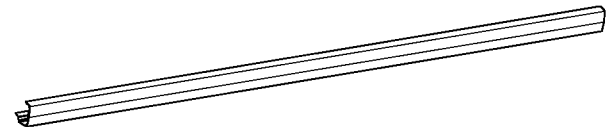


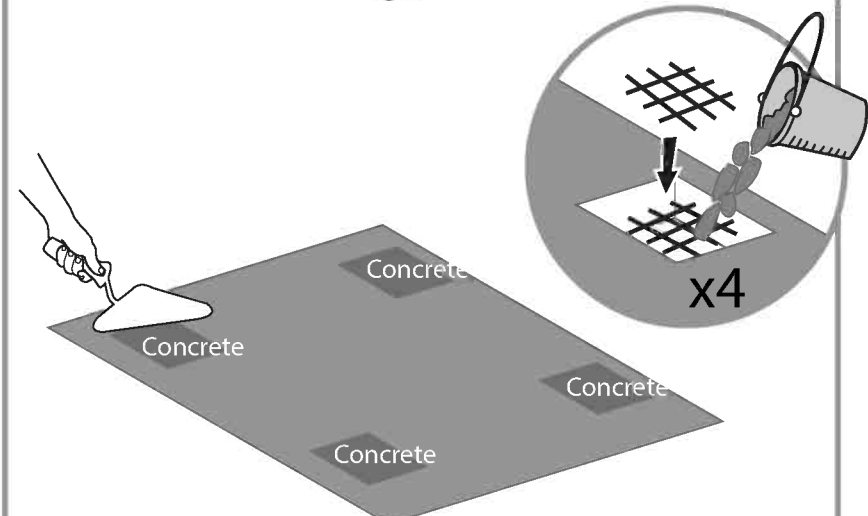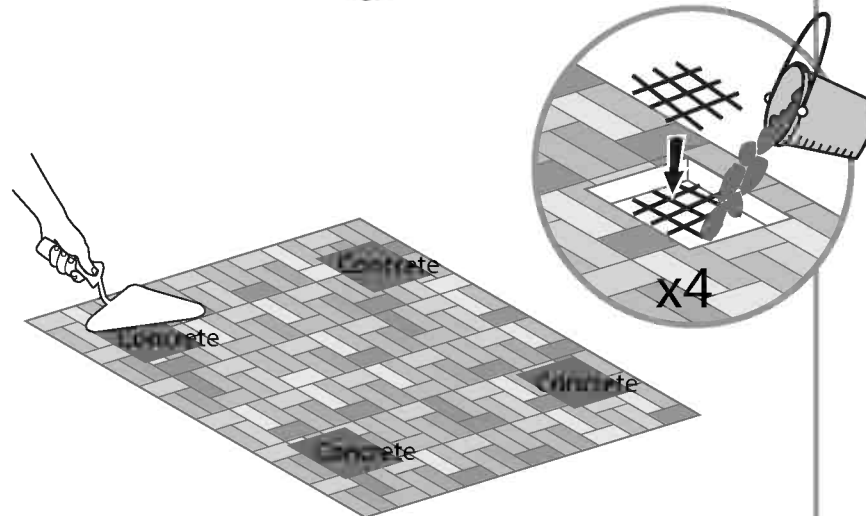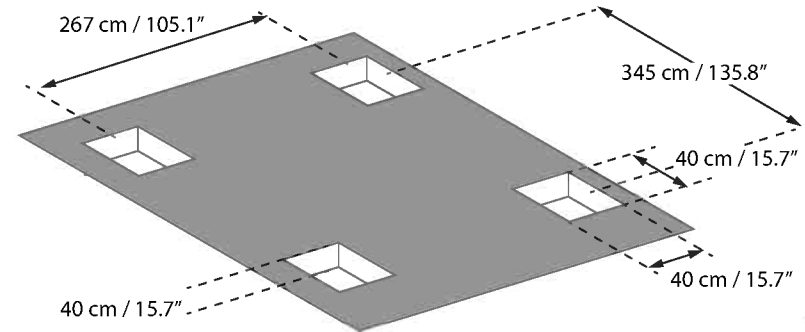








Asphaltes







Contents

Item		Qty.	Item		Qty.	Item		Qty.
4042		16 (+1)	447		40 (+5)	7580		14
7579		8 (+1)				212		8
4000		16 (+1)	8708		20 (+2)	7038		12
433		64 (+3)				7039		2
4010		16 (+1)	7029		2	7655		4
5000		40 (+2)				7653		2
411		76 (+4)	7028		2	7654		2
466		52 (+3)				7575		8
414		24 (+1)	7027		2			
413		24 (+1)						

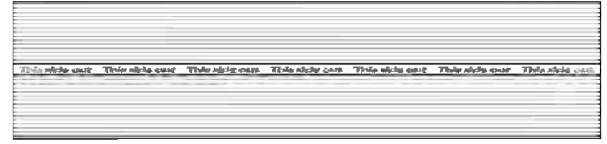

Contents

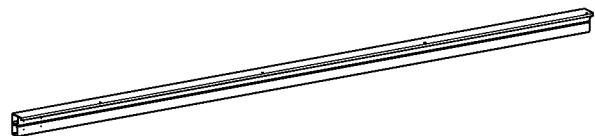Item		Qty.	Item		Qty.
7568	  200 cm / 78.7"	2	7651	 	2
8002	 196 cm / 77"	2	7652		2
7987	 	6	7506	 	2
7988	 	2	7990		7
7649	 	2	T001		1
7650		2			


1

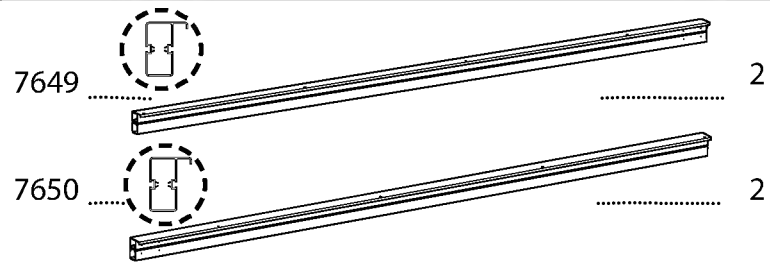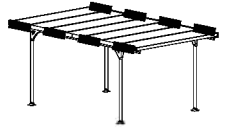


x2

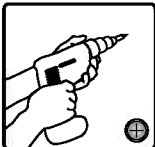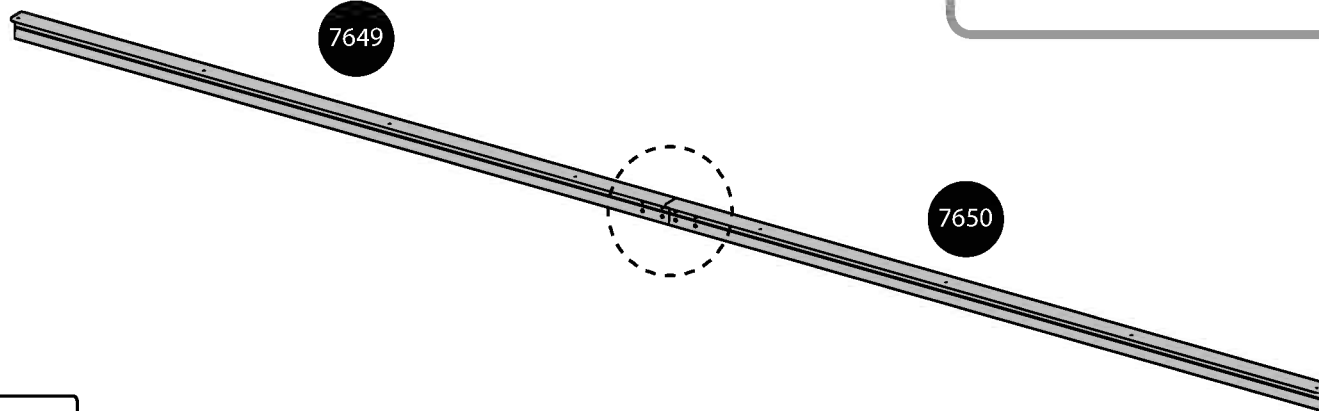


a

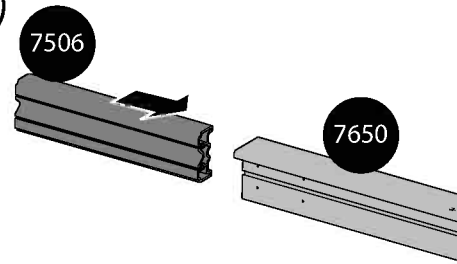

b

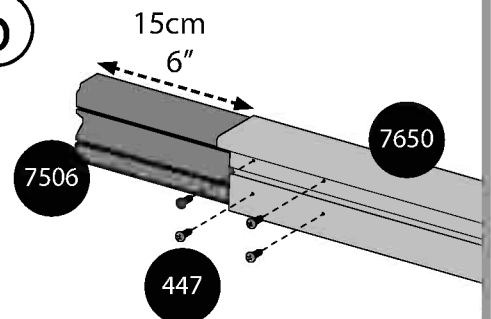

c




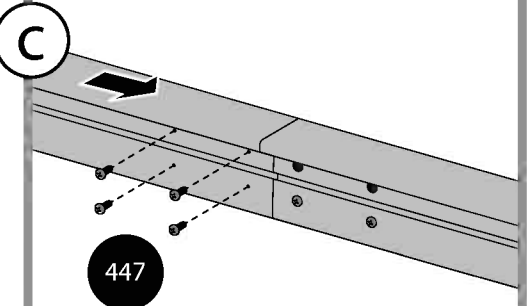












411 16


413 16

7575 8

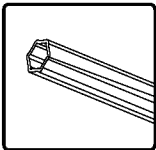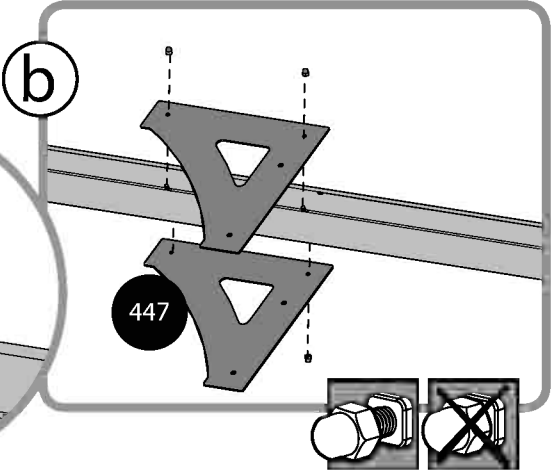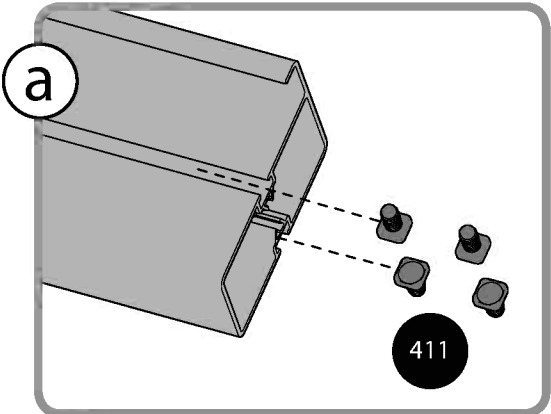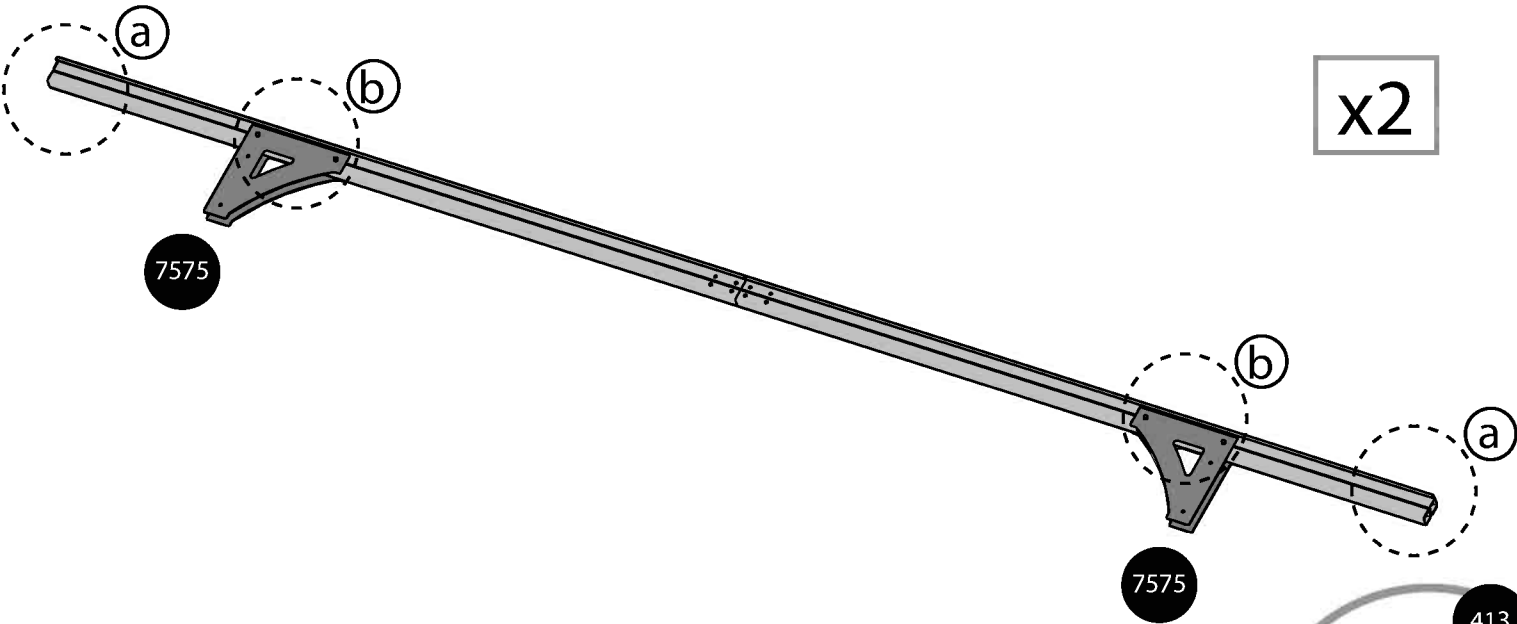

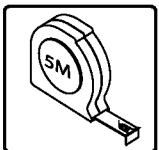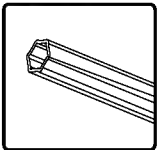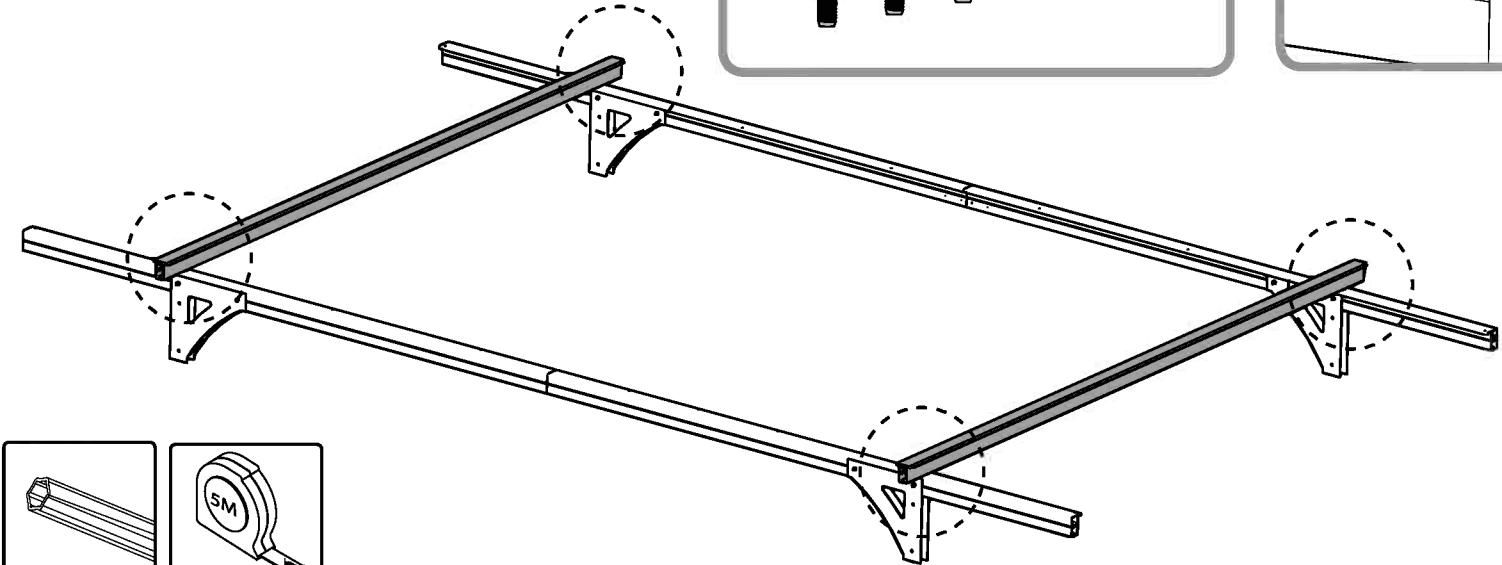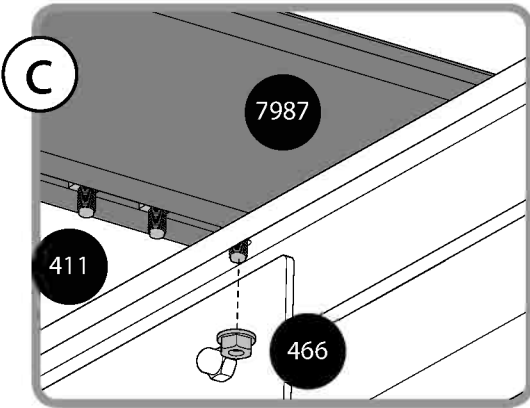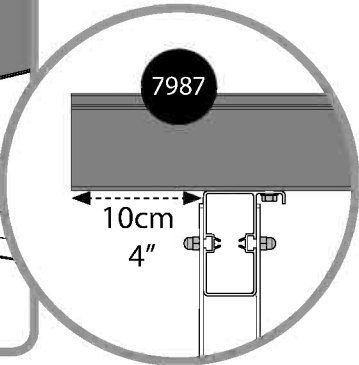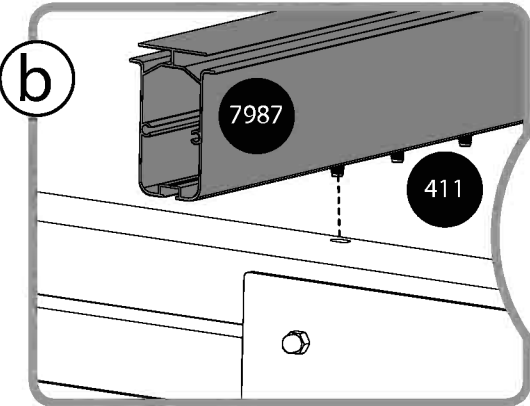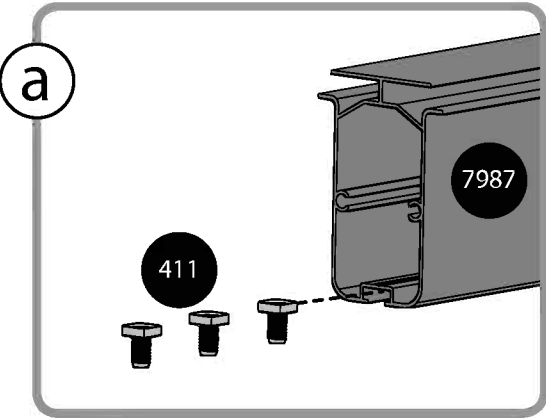

4

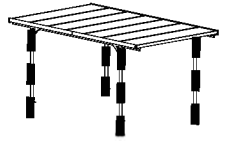

7568 200 cm / 78.7" 2




8002 196 cm / 77" 2


4042 8

212 8

433 16

414 8


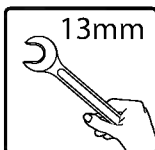
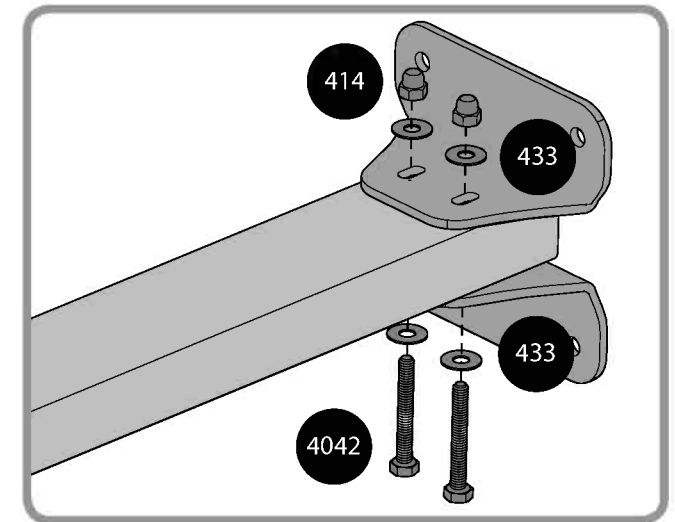
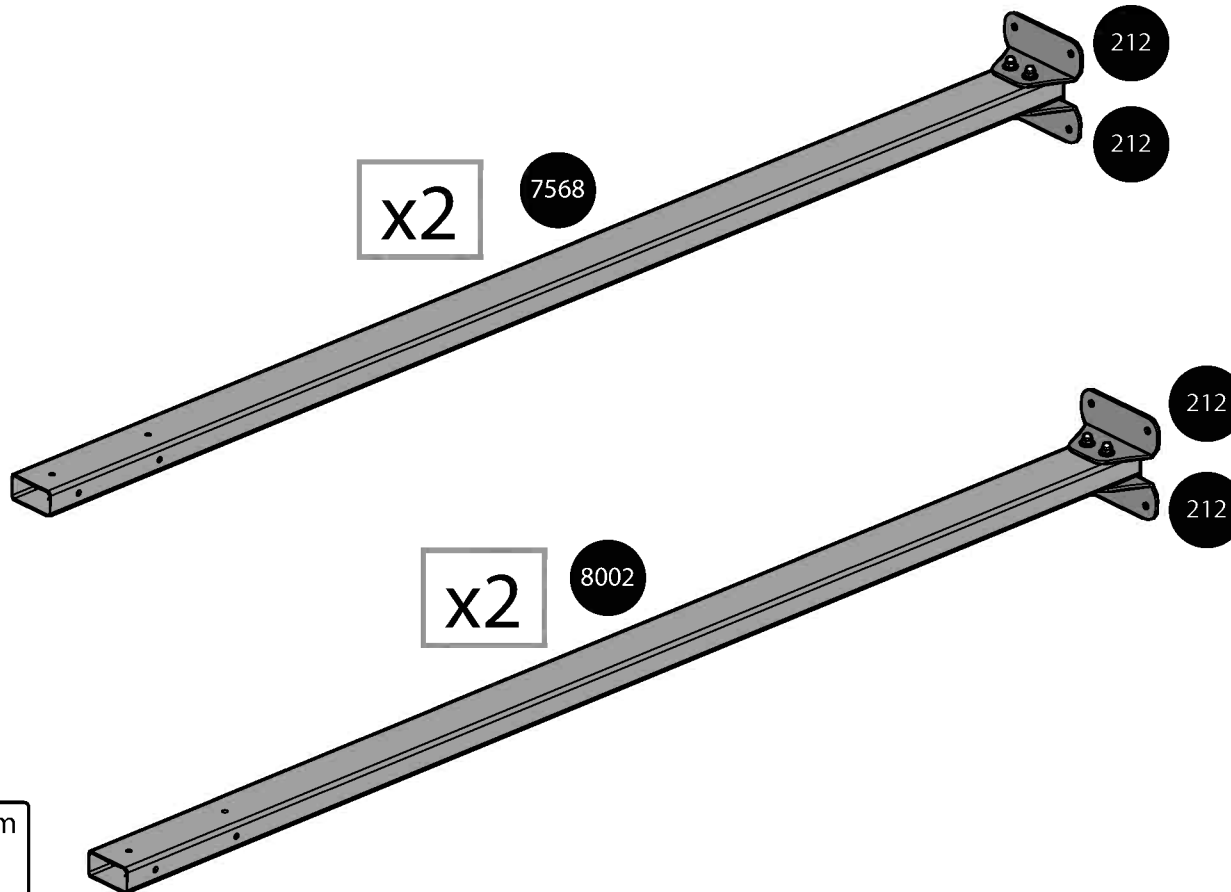


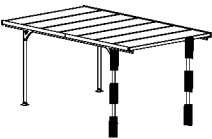


4042 4

414 4

433 8

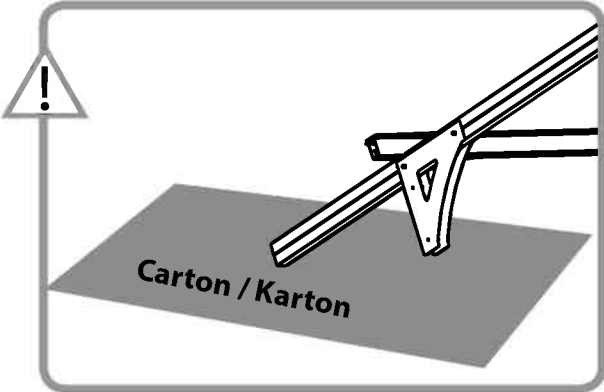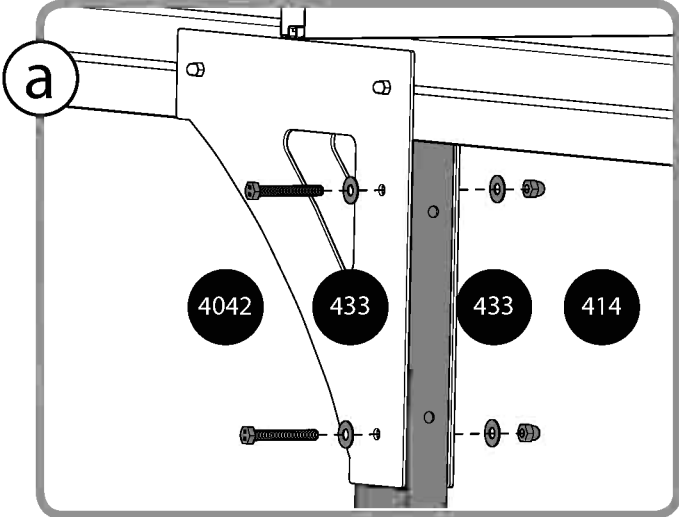
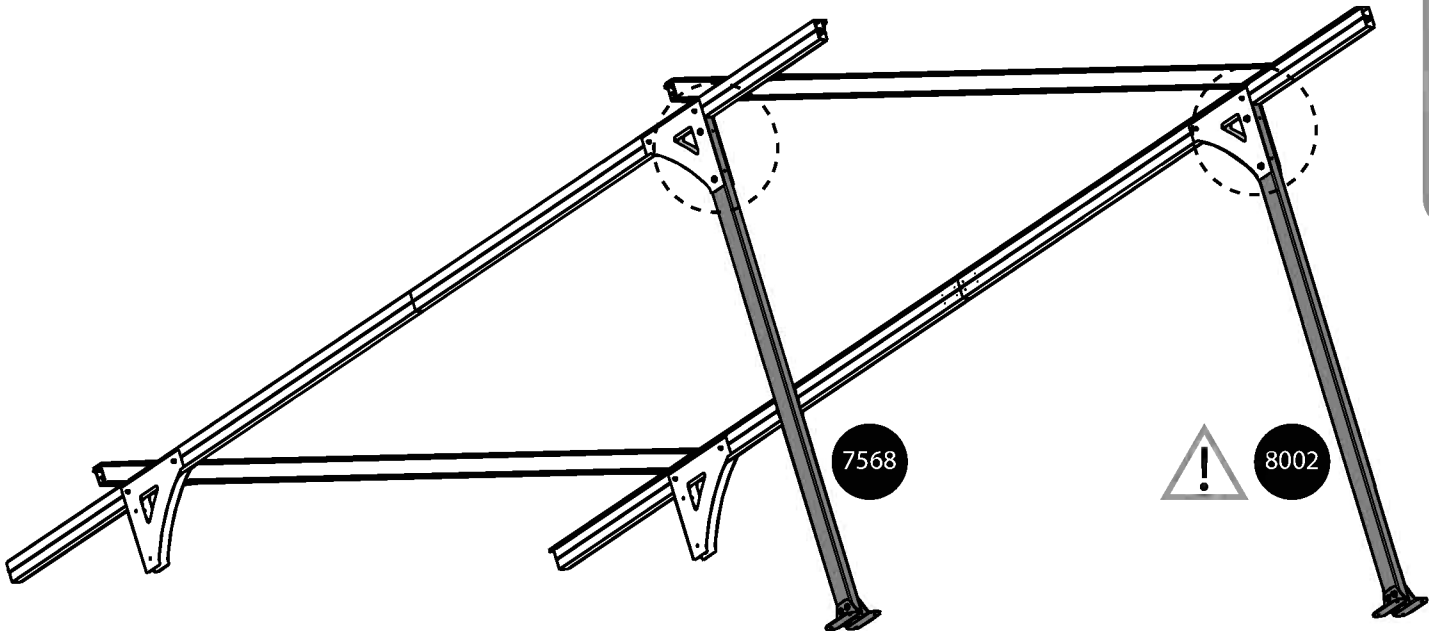
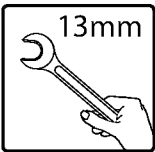


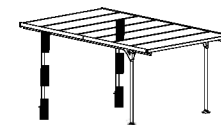


4042 4






414 4




433 8

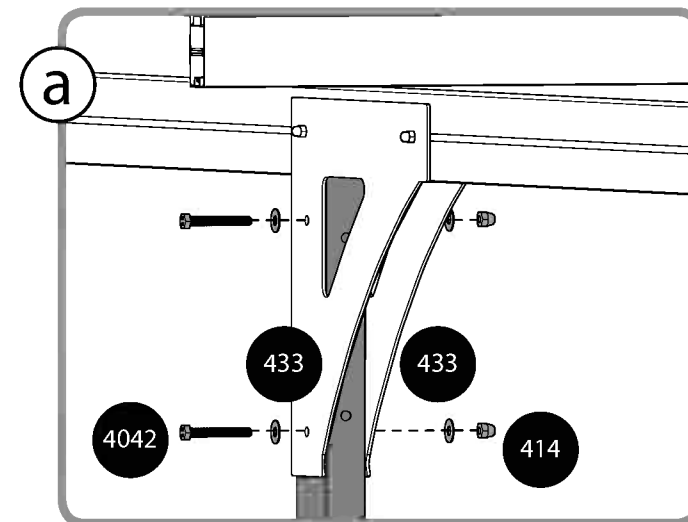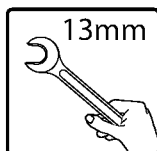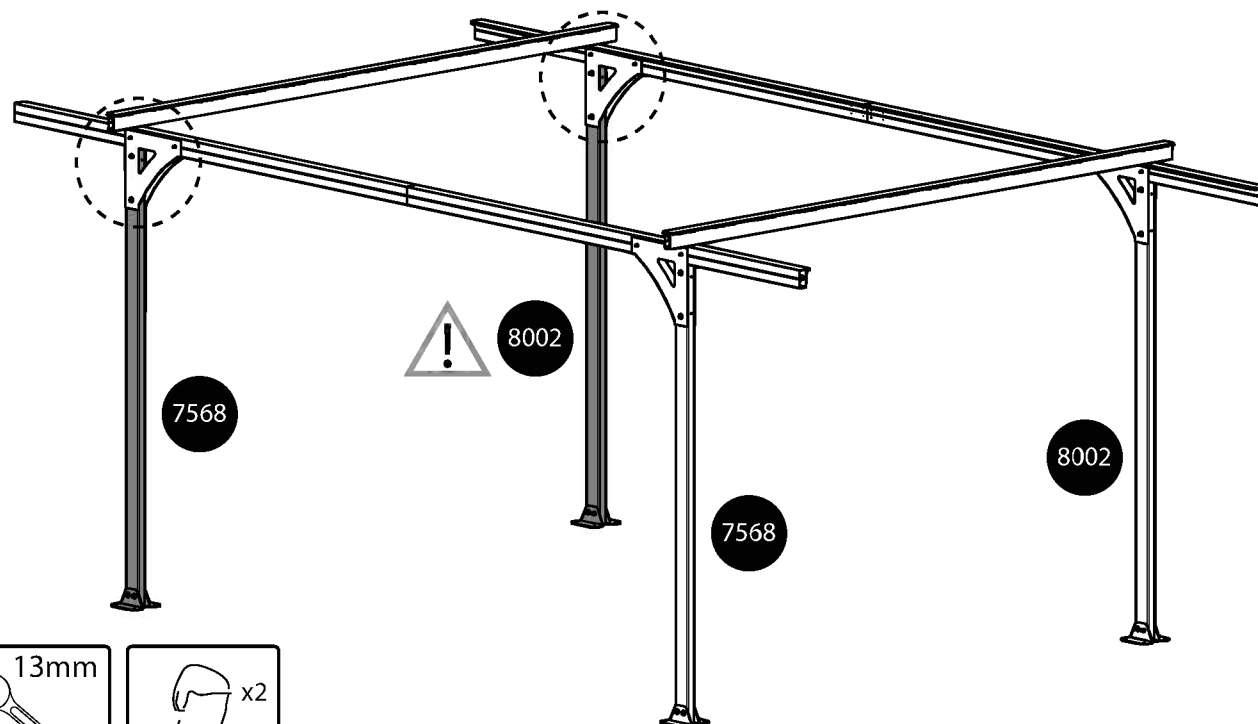


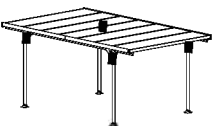


- | | | | | | | | | |
|------|--|---|------|--|---|-----|--|----|
| 7653 | | 2 | 7579 | | 8 | 433 | | 16 |
| 7654 | | 2 | 414 | | 8 | 413 | | 8 |

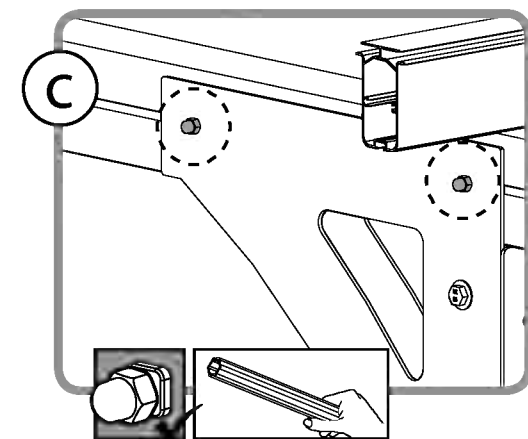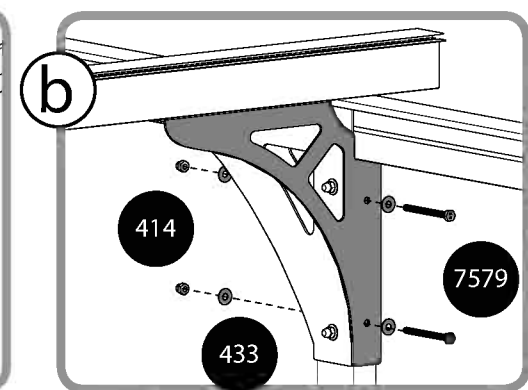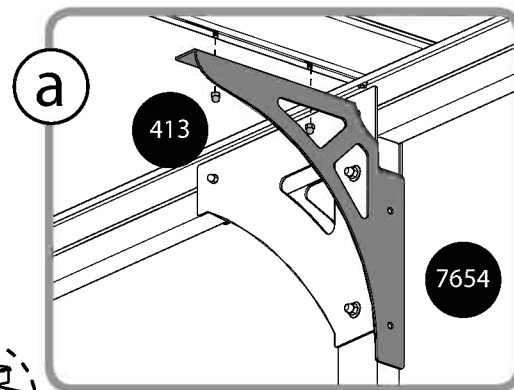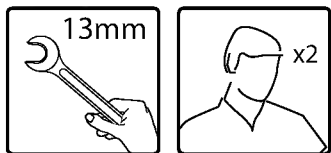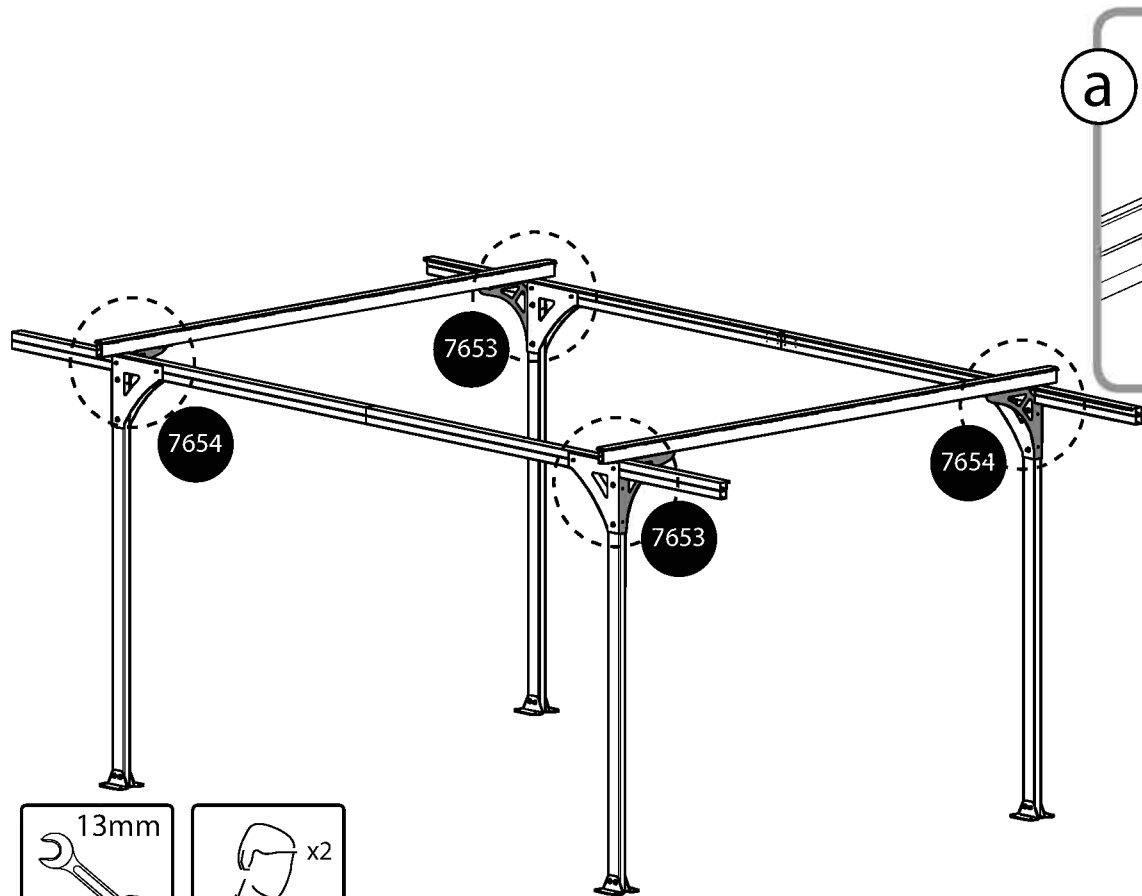


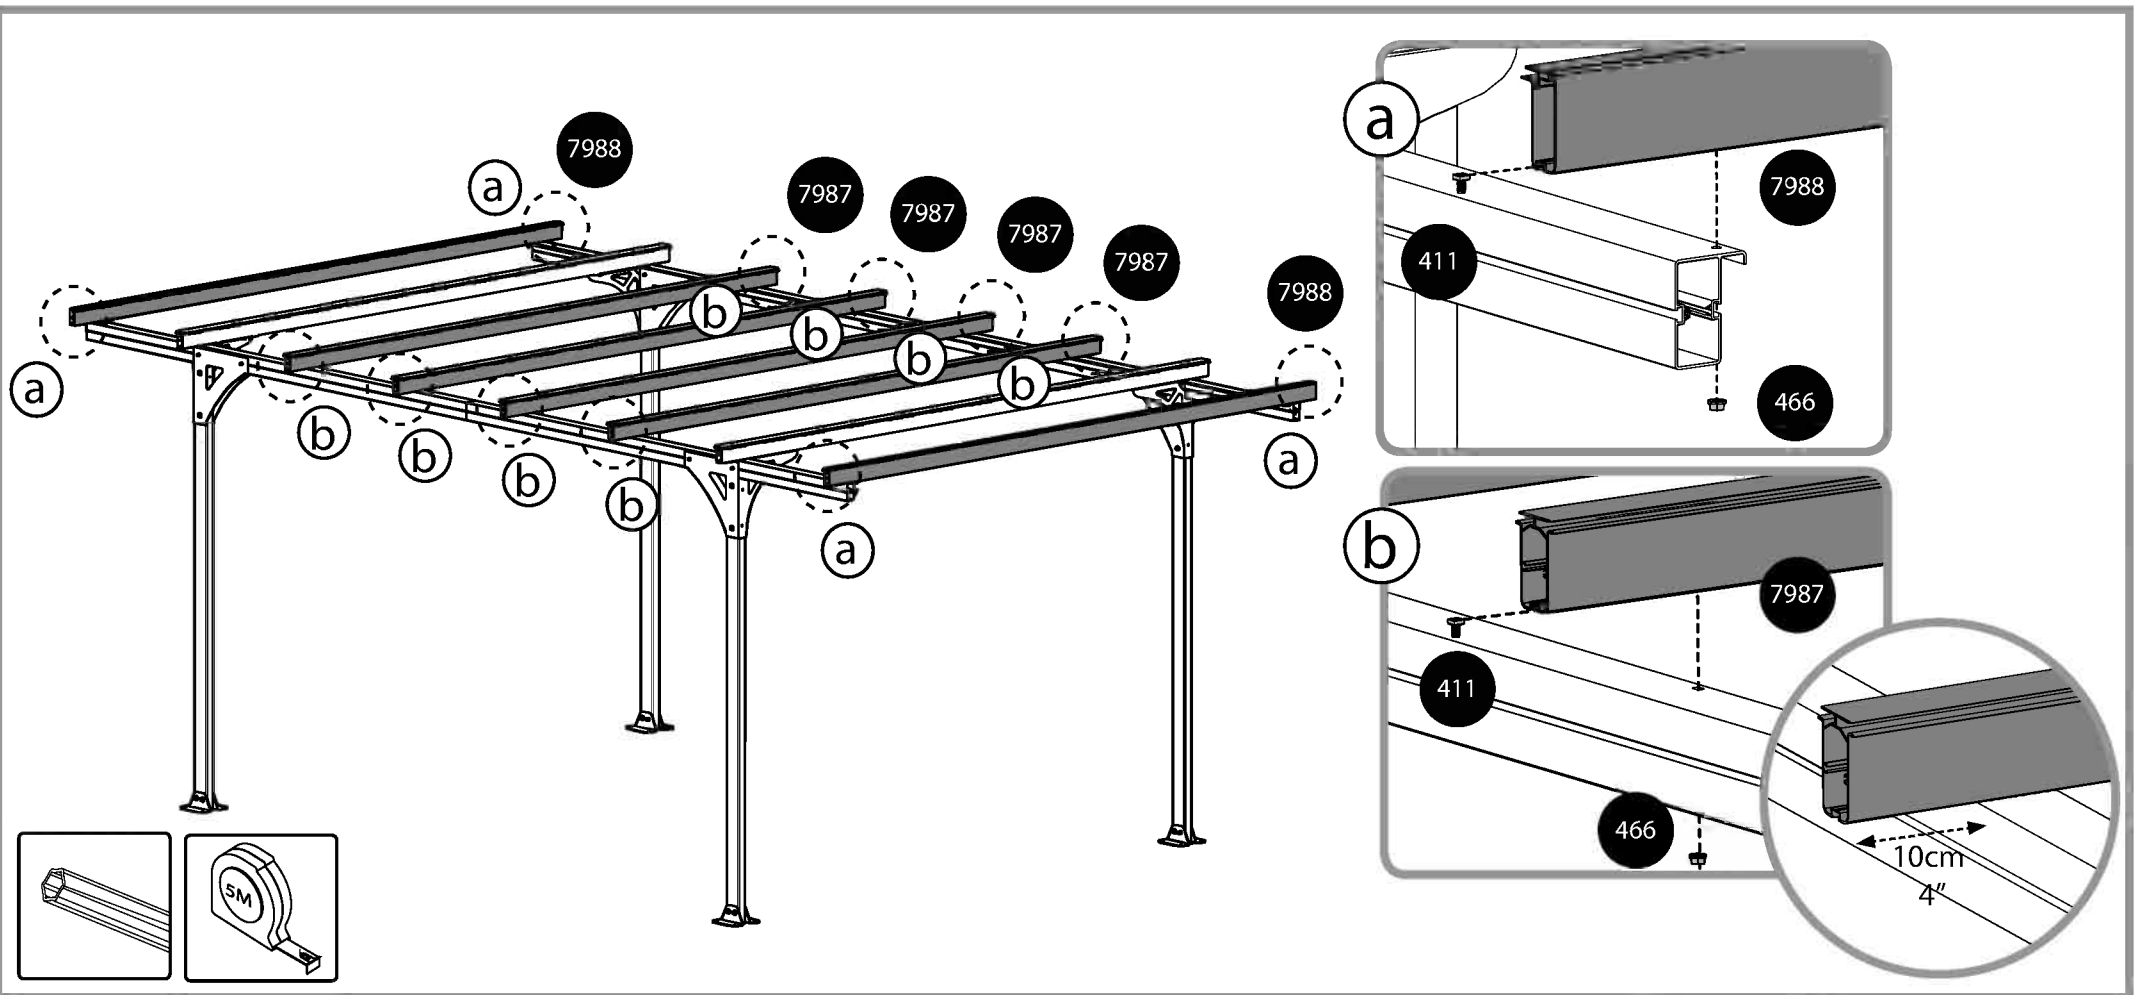




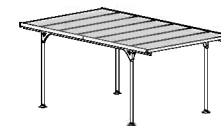



7990

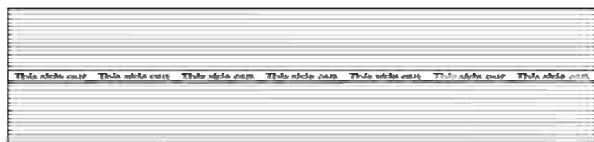



7

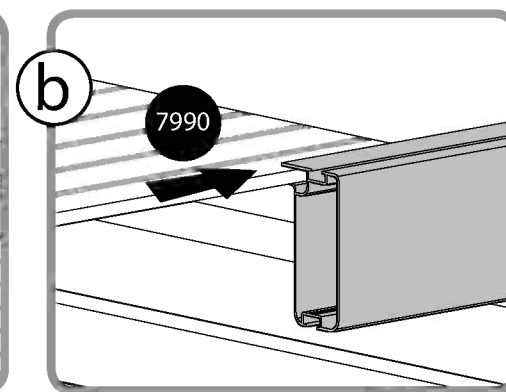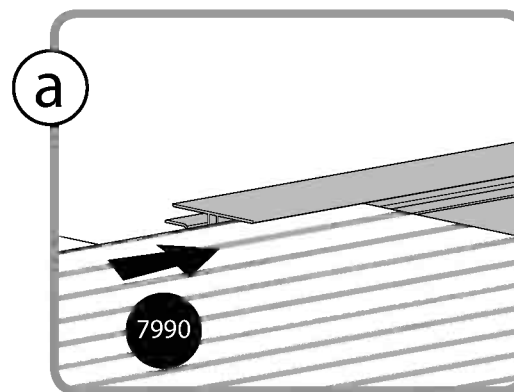
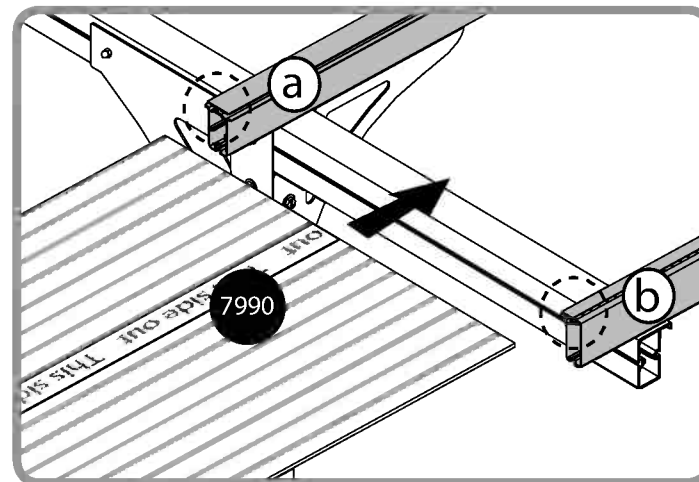
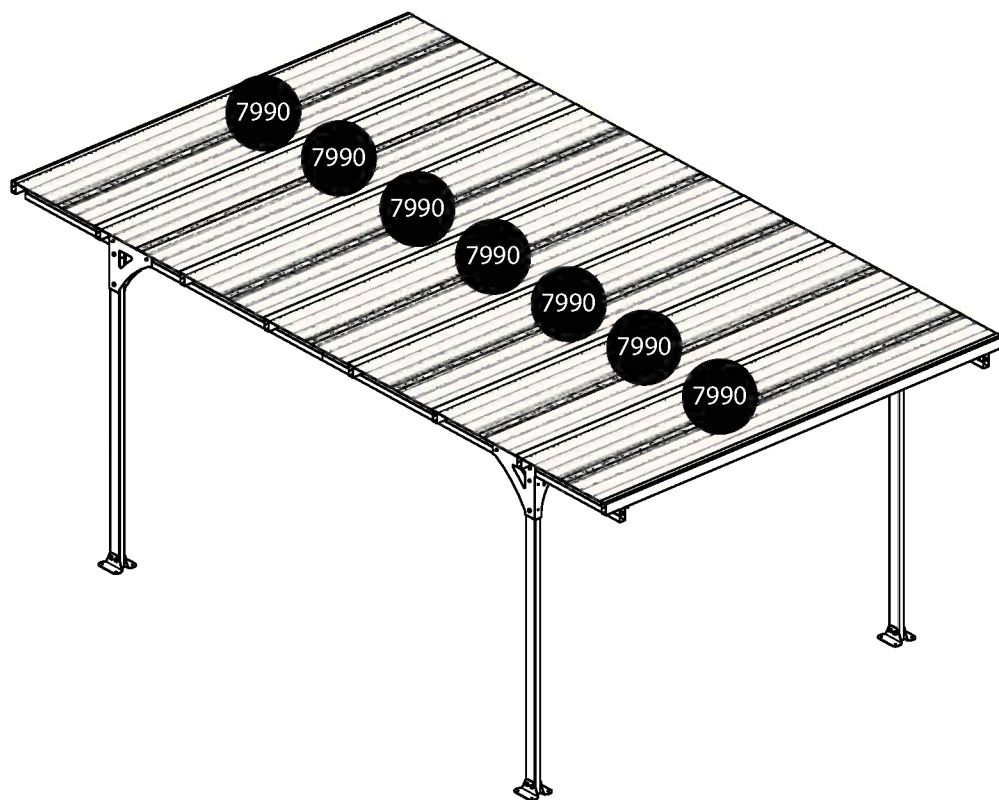


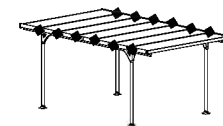

447  24

411  12

7038  12

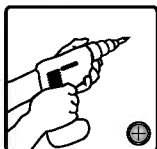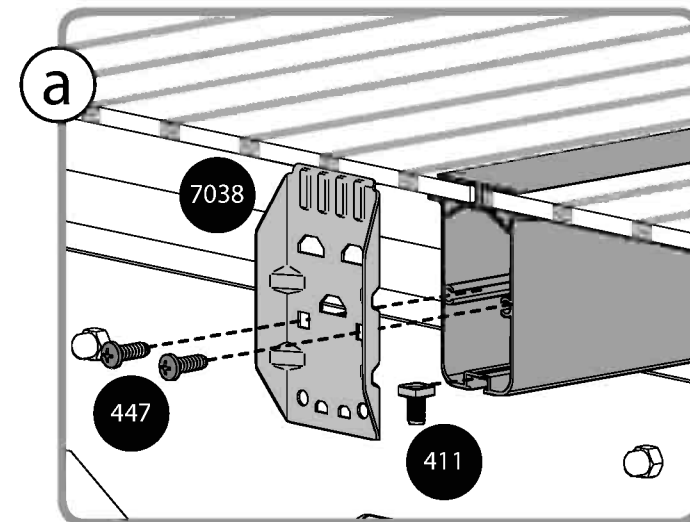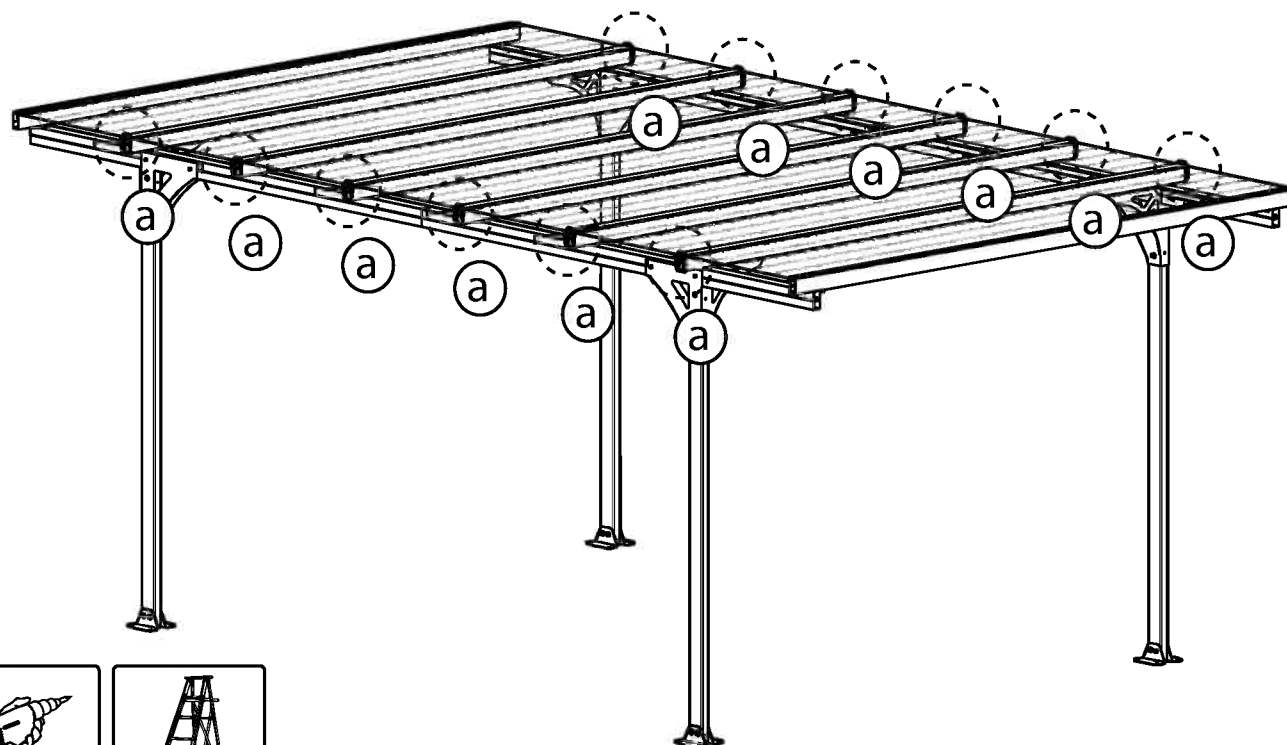




411 8



466 8




7029 2

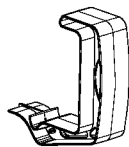





7580 2



7039 2



x2


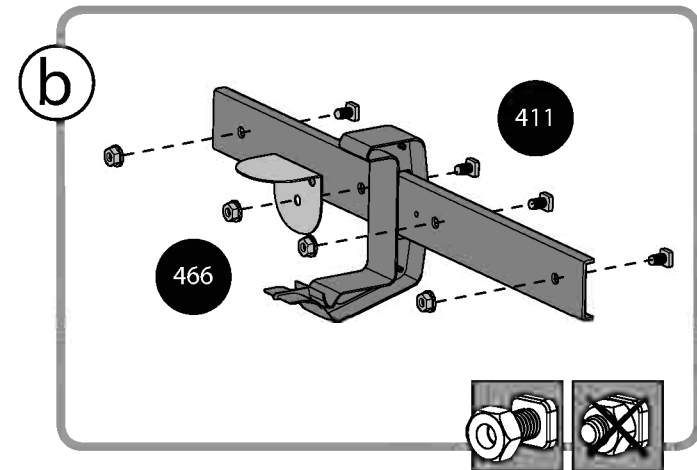
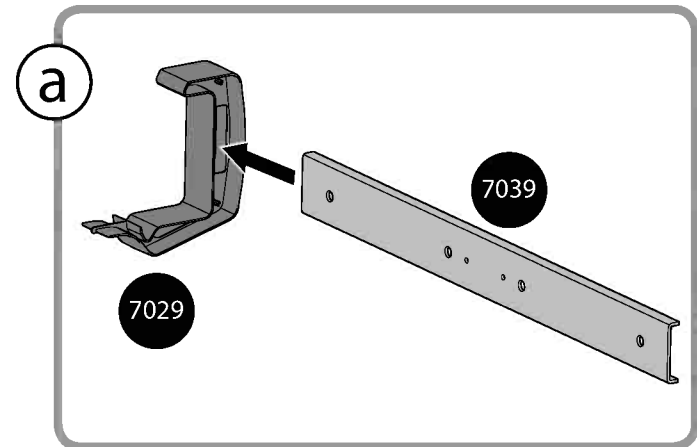
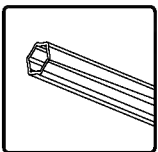
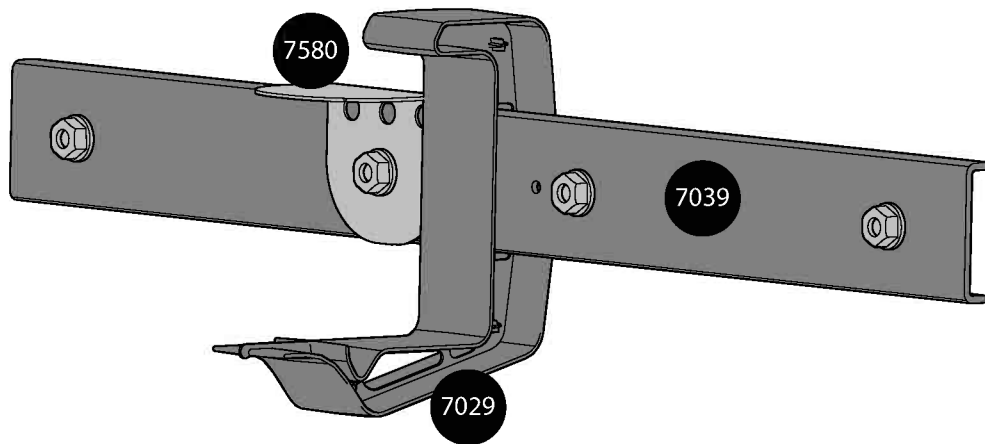




7652 2

7651 2

x2

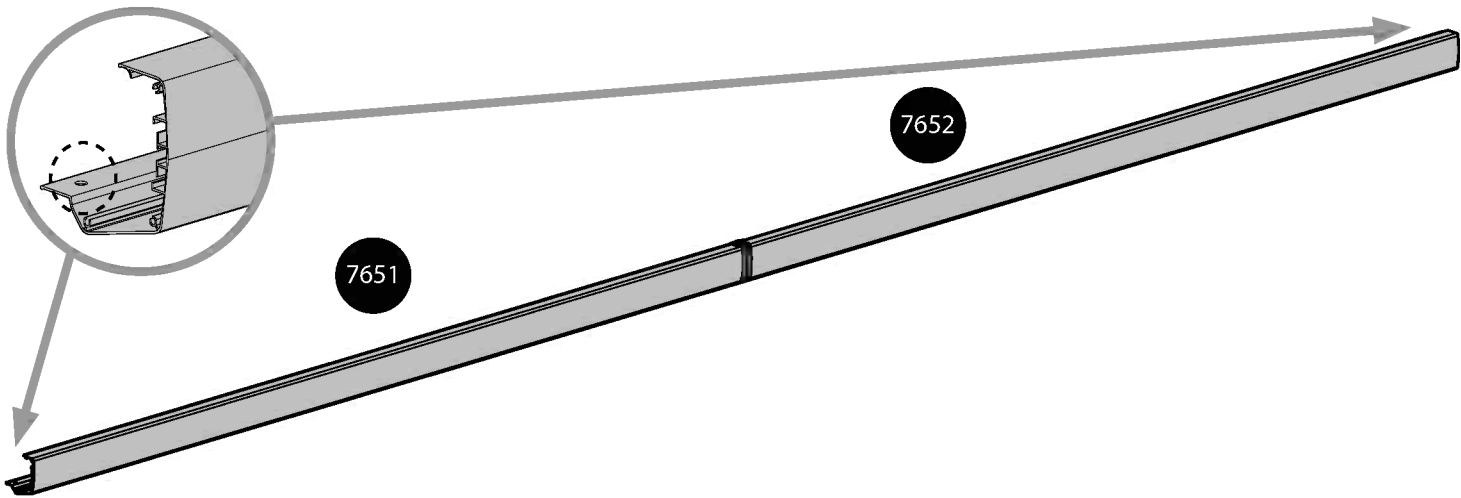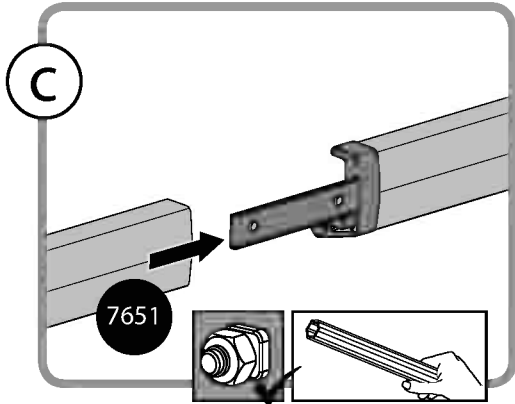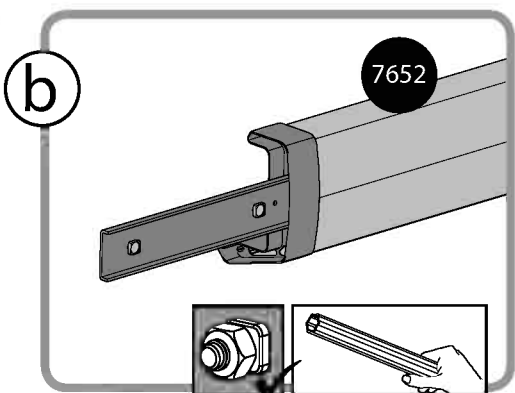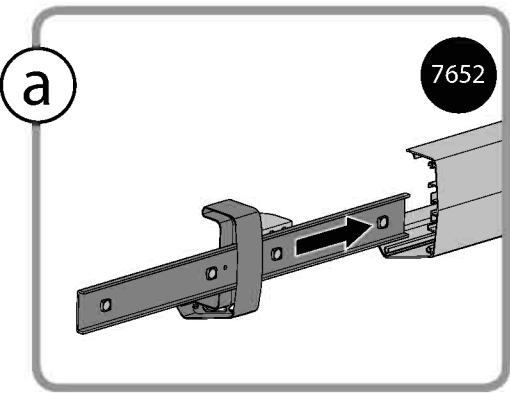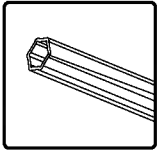




411 12








7580 12




466 12




x2

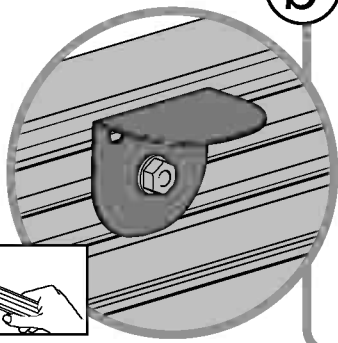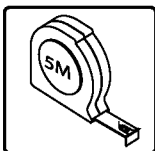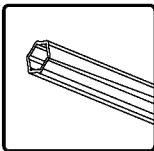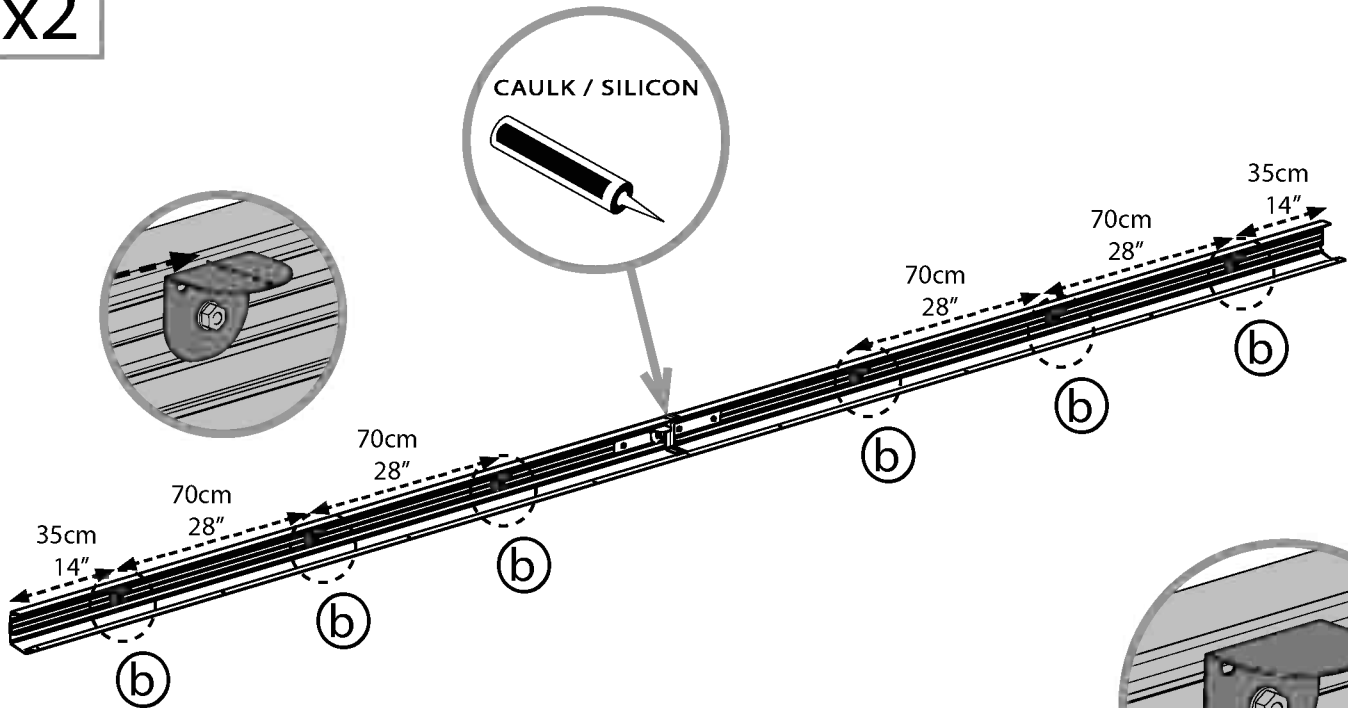



a


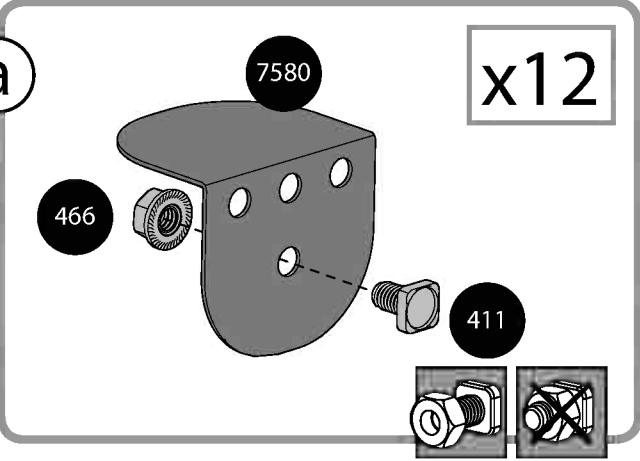



b

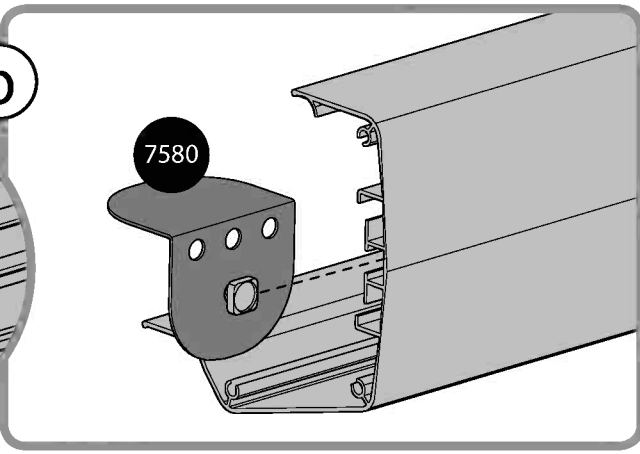






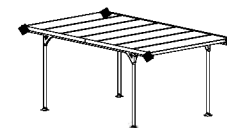



411  4

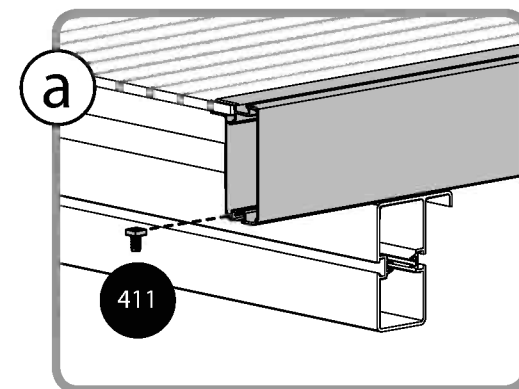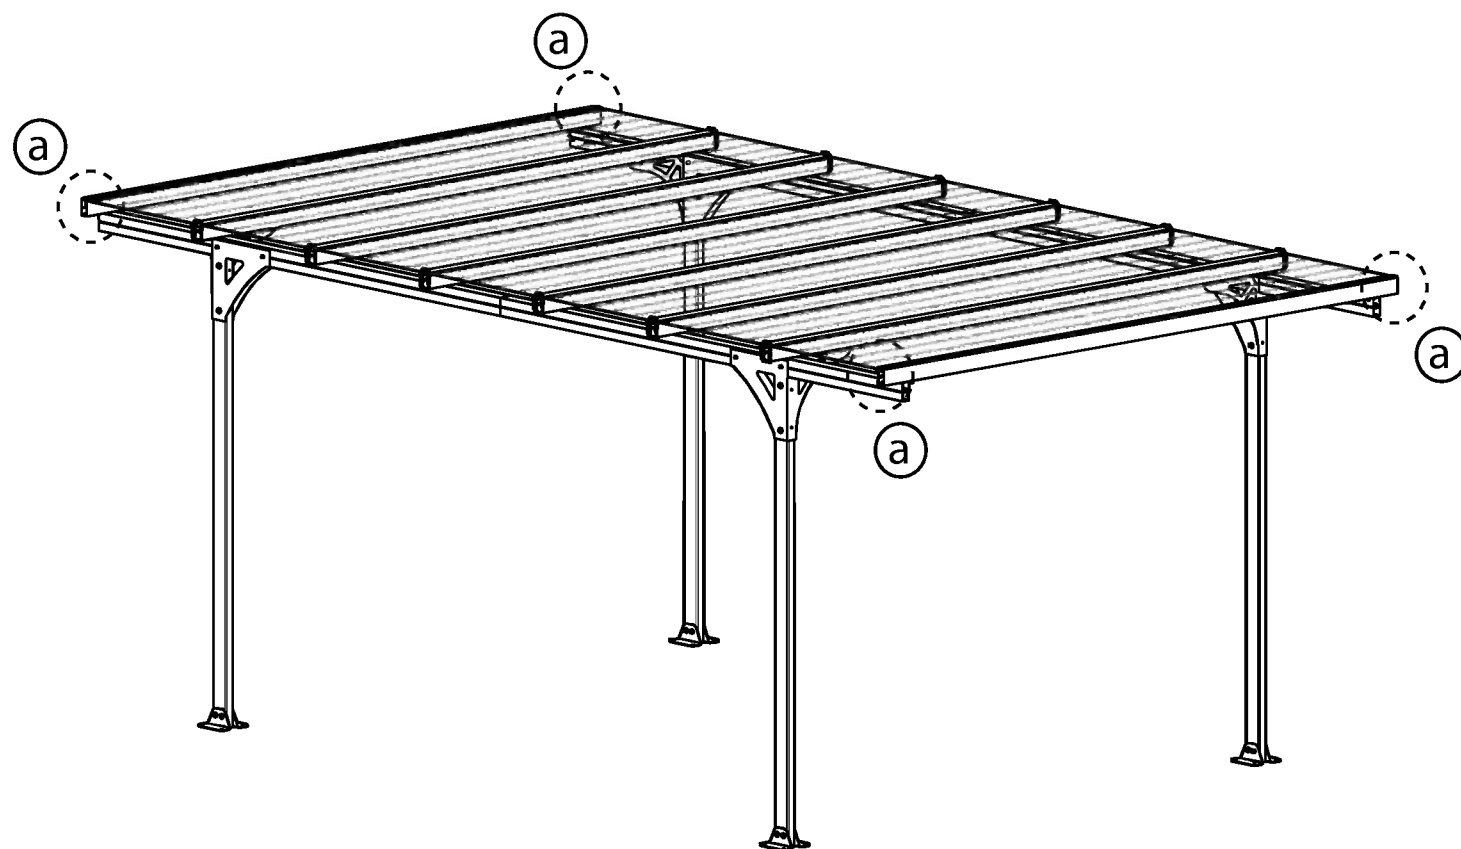

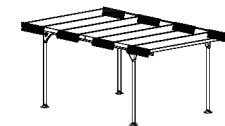

466  16

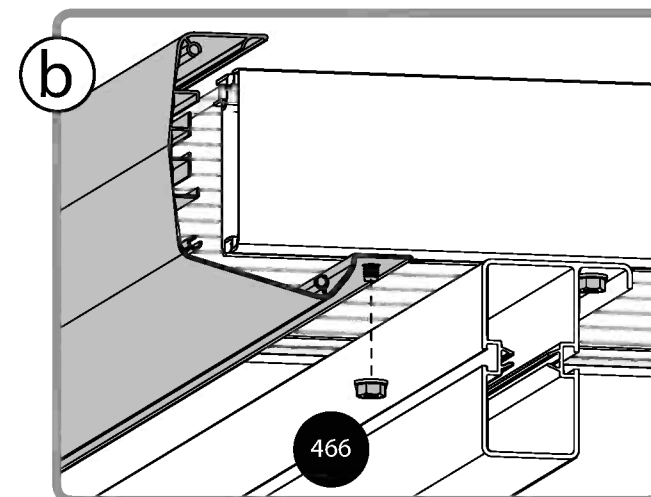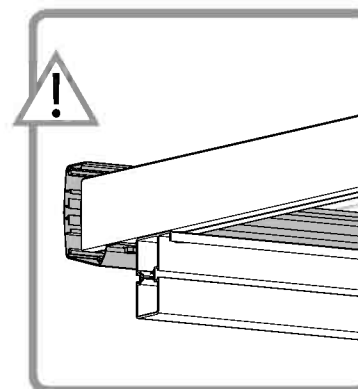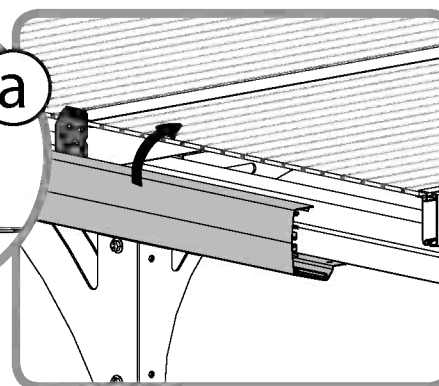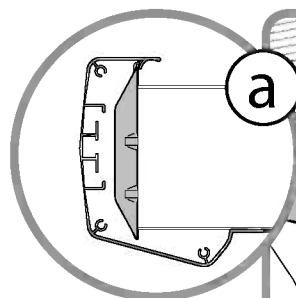
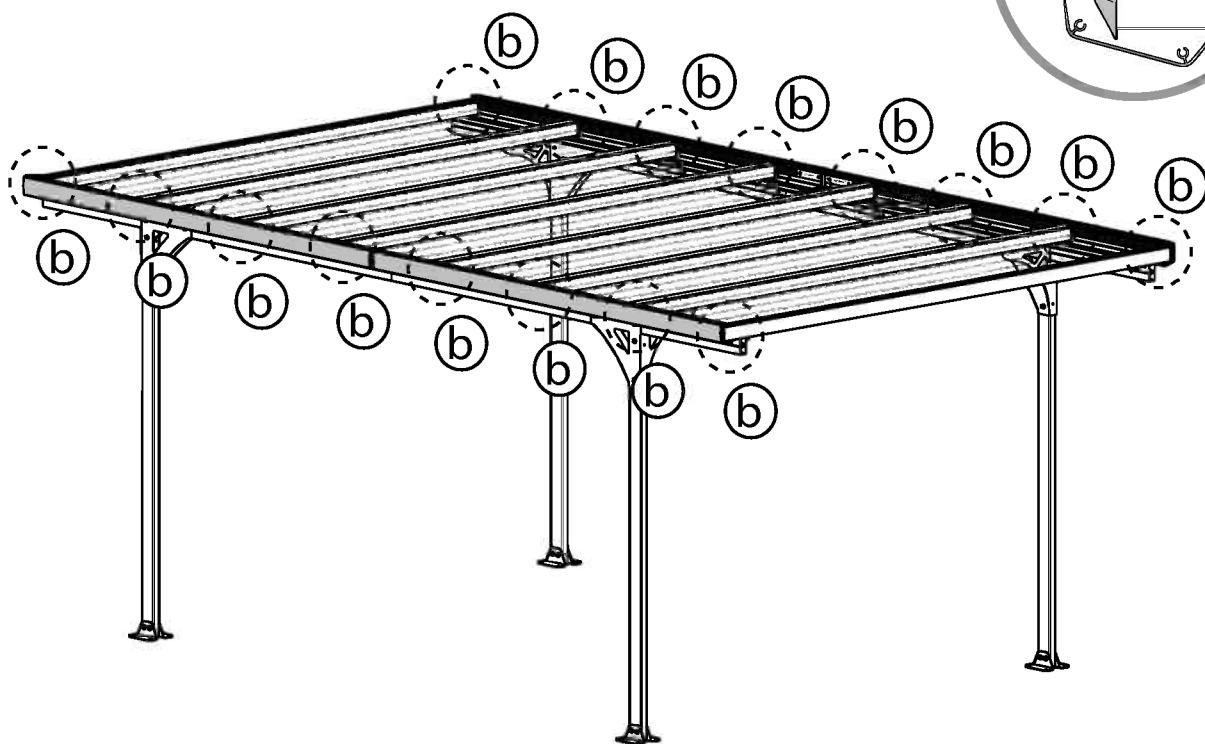
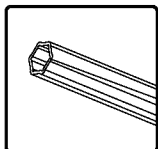


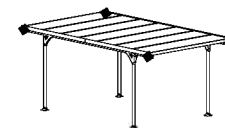


- 7028 2
- 7027 2

- 7655 4

- 8708 20

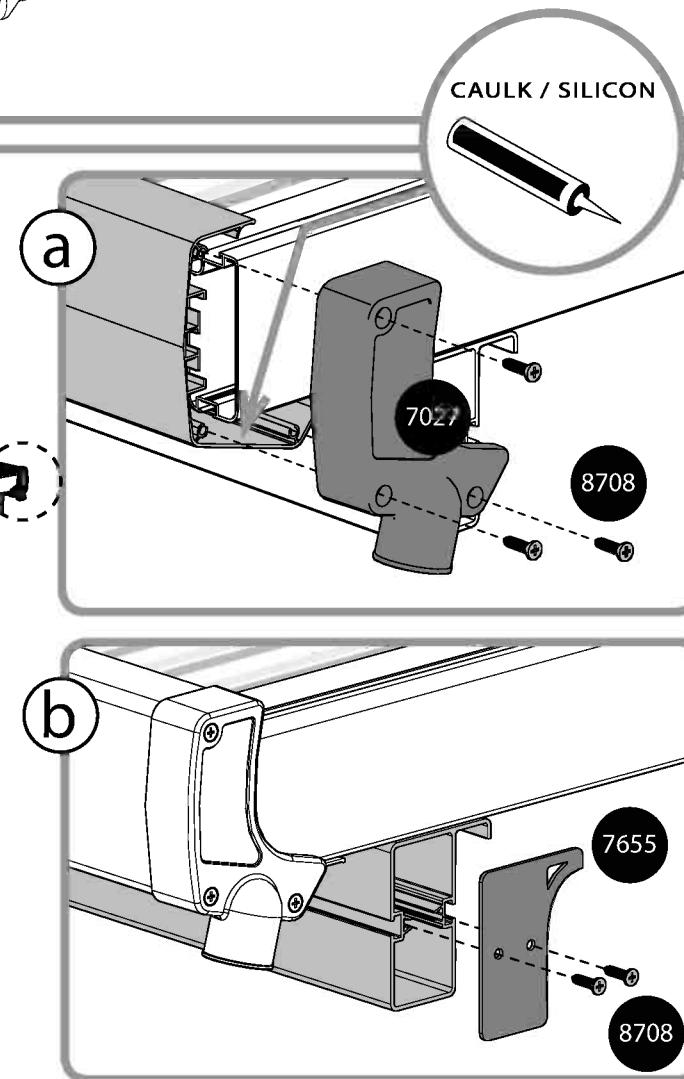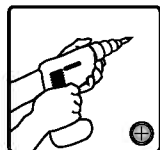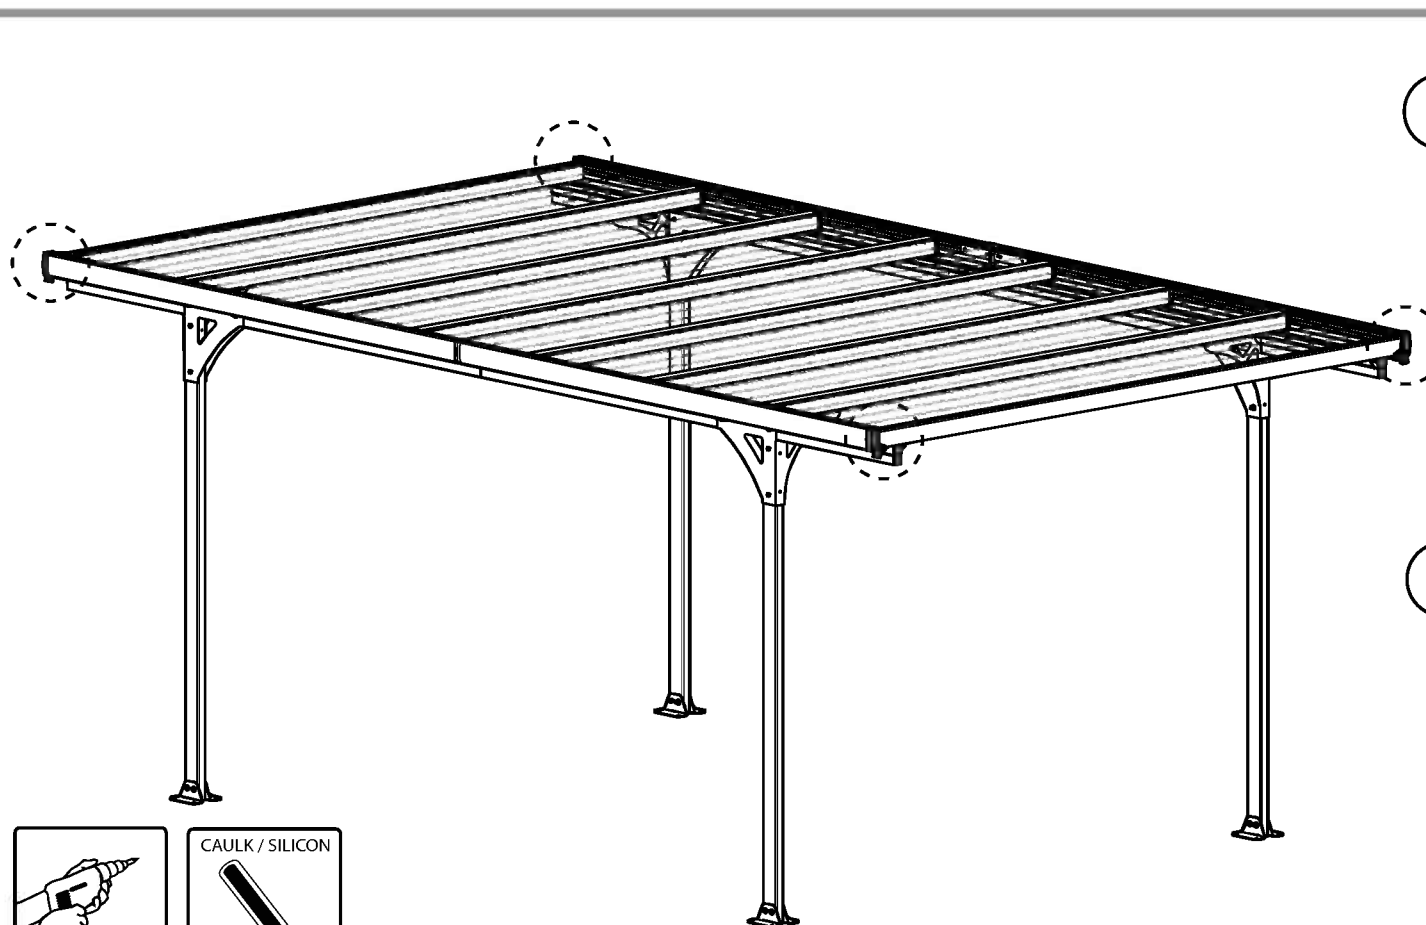

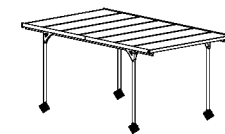


4000 16



4010 16

433 16



5000 16

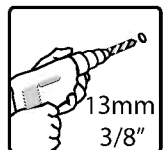


13mm
3/8"

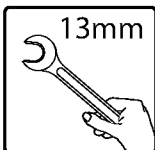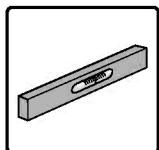

13mm

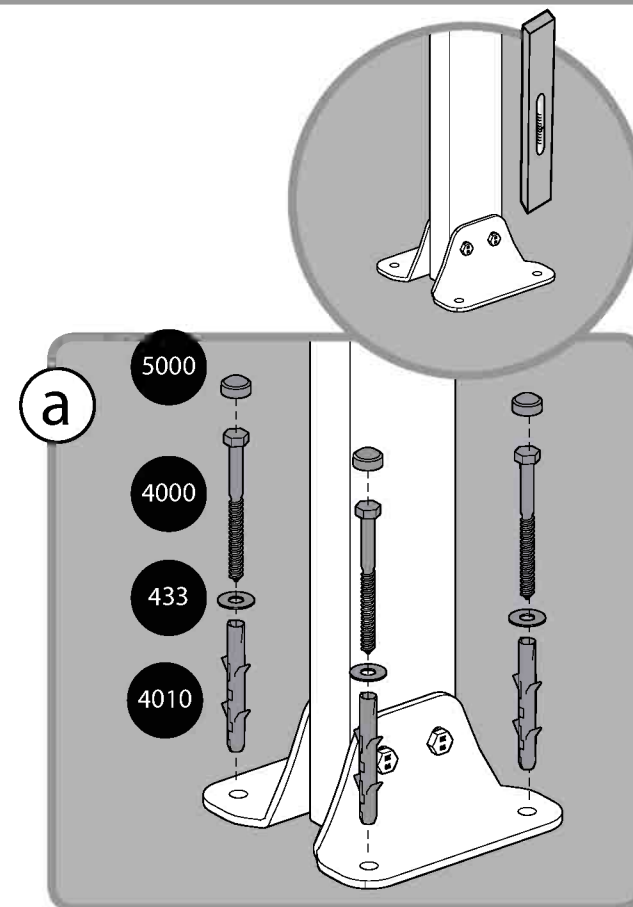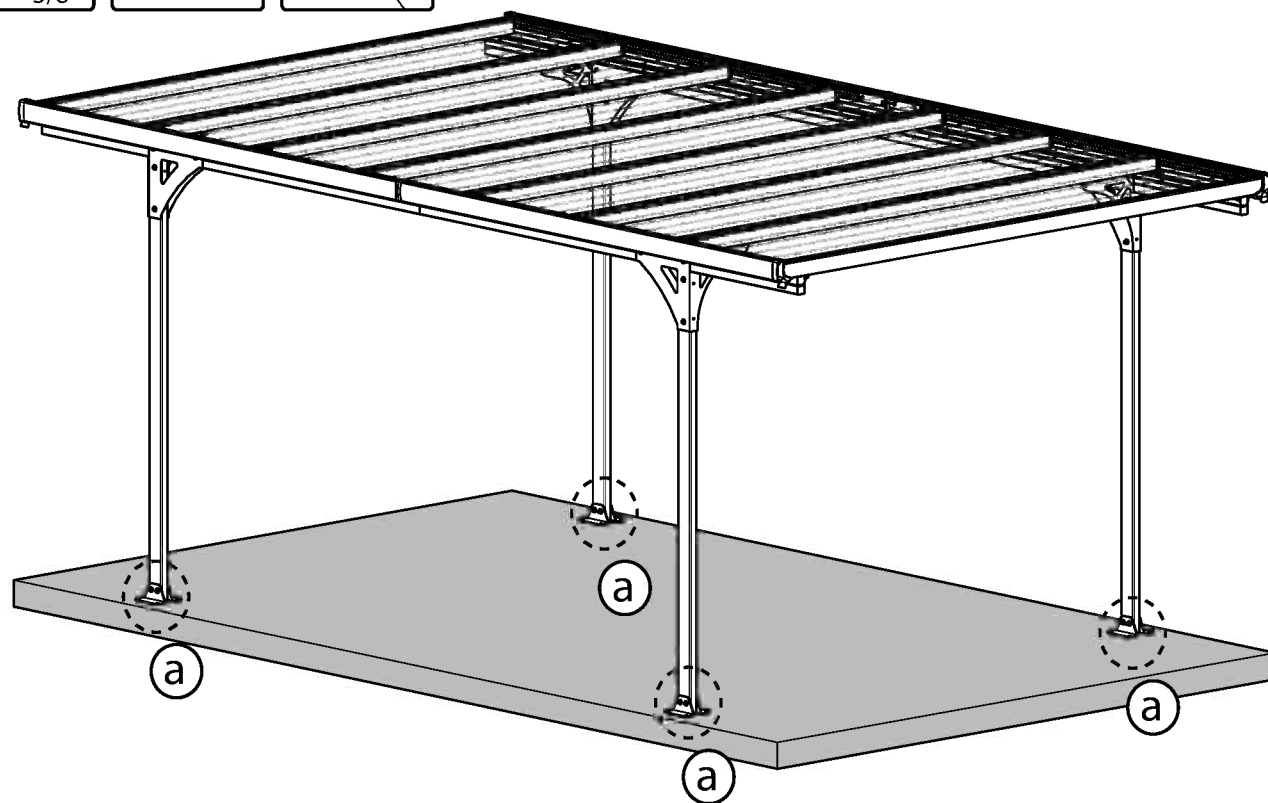



5000  40

